



Idle Free Systems, Inc.

Reference Guide System Component Information



Idle Free Reference Sheets
System Components & Trouble shooting
Table of Contents



RF #	Page #	
RF101	1	Battery Separator
RF102	5	DC Voltage
RF103	7	Thermostat
RF104	9	Power Converter
RF105	11	Inverter
RF106	17	Relay Group
RF107	23	Ignition Cut-out
RF108	25	DC Fuse Holder
RF109	27	ReeferLink Connection
RF110	29	UBB
RF111	33	Evaporator
RF112	35	Compressor Circuit
RF113	37	DC Wiring, APU
RF114	39	Water Heater Module
RF115	39	APU
RF116	41	AGM Batteries
RF117	45	Cam Lock Connectors
RF118	47	Refrigerant Quick Connectors
RF120	49	DC Connection Service
RF121	53	Drier & Pressure Switch
RF122	55	Start Capacitor
RF123	57	Battery Test Procedure
RF124	61	10 reasons APU AGM Batteries are not charged
RF125	63	Driver system Orientation
RF126	65	Driver Orientation, ReeferLink
RF128	67	8 second + 5 minute delay circuit/timer
RF129	69	Compressor, Tecumseh
RF130	71	120VAC Service Procedures



This Page
Intentionally Blank

Battery Separator – RF101

Component Description & Application

Battery Separator
IFS Part # 35004

Component Location
APU, exterior
Top Level, front
Above outside battery



Description & Application

The Battery Separator is used to separate the Truck's battery bank from the Idle Free, AGM battery bank.

The Battery Separator is rated at 200 DC Amps and is controlled by its attached circuit board.

The battery separator connects the truck battery bank to the APU battery bank when it determines that the truck's battery bank has reached and exceeded 13.2 VDC.

When the battery separator closes, the truck's alternator charges the combined battery banks, the truck starter batteries and the Idle Free Batteries.

If the alternator fails to keep the combined battery voltage above 12.8 VDC, the battery separator will open (separate the battery banks).

The Battery Separator will combine both battery banks together when either battery bank reaches and exceeds 13.2 VDC.

The Idle Free AC to DC Power Converter (RF104) is connected to the AGM battery side of the battery separator via the UBB, (under bed box, RF110). This means whenever the Idle Free AC to DC Power Converter is plugged into Shore Power, the ac to dc power inverter supplies DC Power to the AGM batteries. When the DC power from the AC to DC Power converter raises and exceeds 13.2 VDC on the Idle Free battery bank, the battery separator will close & send the AC to DC power to the trucks battery bank via the battery separator.

If the combined battery bank voltage drops below 12.8VDC, the battery separator will open the connection between the 2 battery banks.

Common Issues

The Battery Separator is trouble free.

The life expediency of the battery separator is dependent on:

- Size of the alternator
- Condition of the batteries connected to it
- Battery cable connection quality.

Service


(See IFS Doc #63004, APU DC Connections)

Clean Battery cables connections

Tighten Battery Cable Connections


Protect Battery Cable connections with Battery Corrosion Protection Spray

Clean and Tighten & Protect Circuit Board Ground wire (bottom terminal)

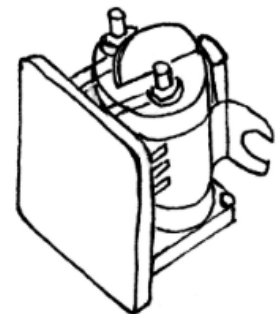

Battery Separator – RF101

Component Description & Application

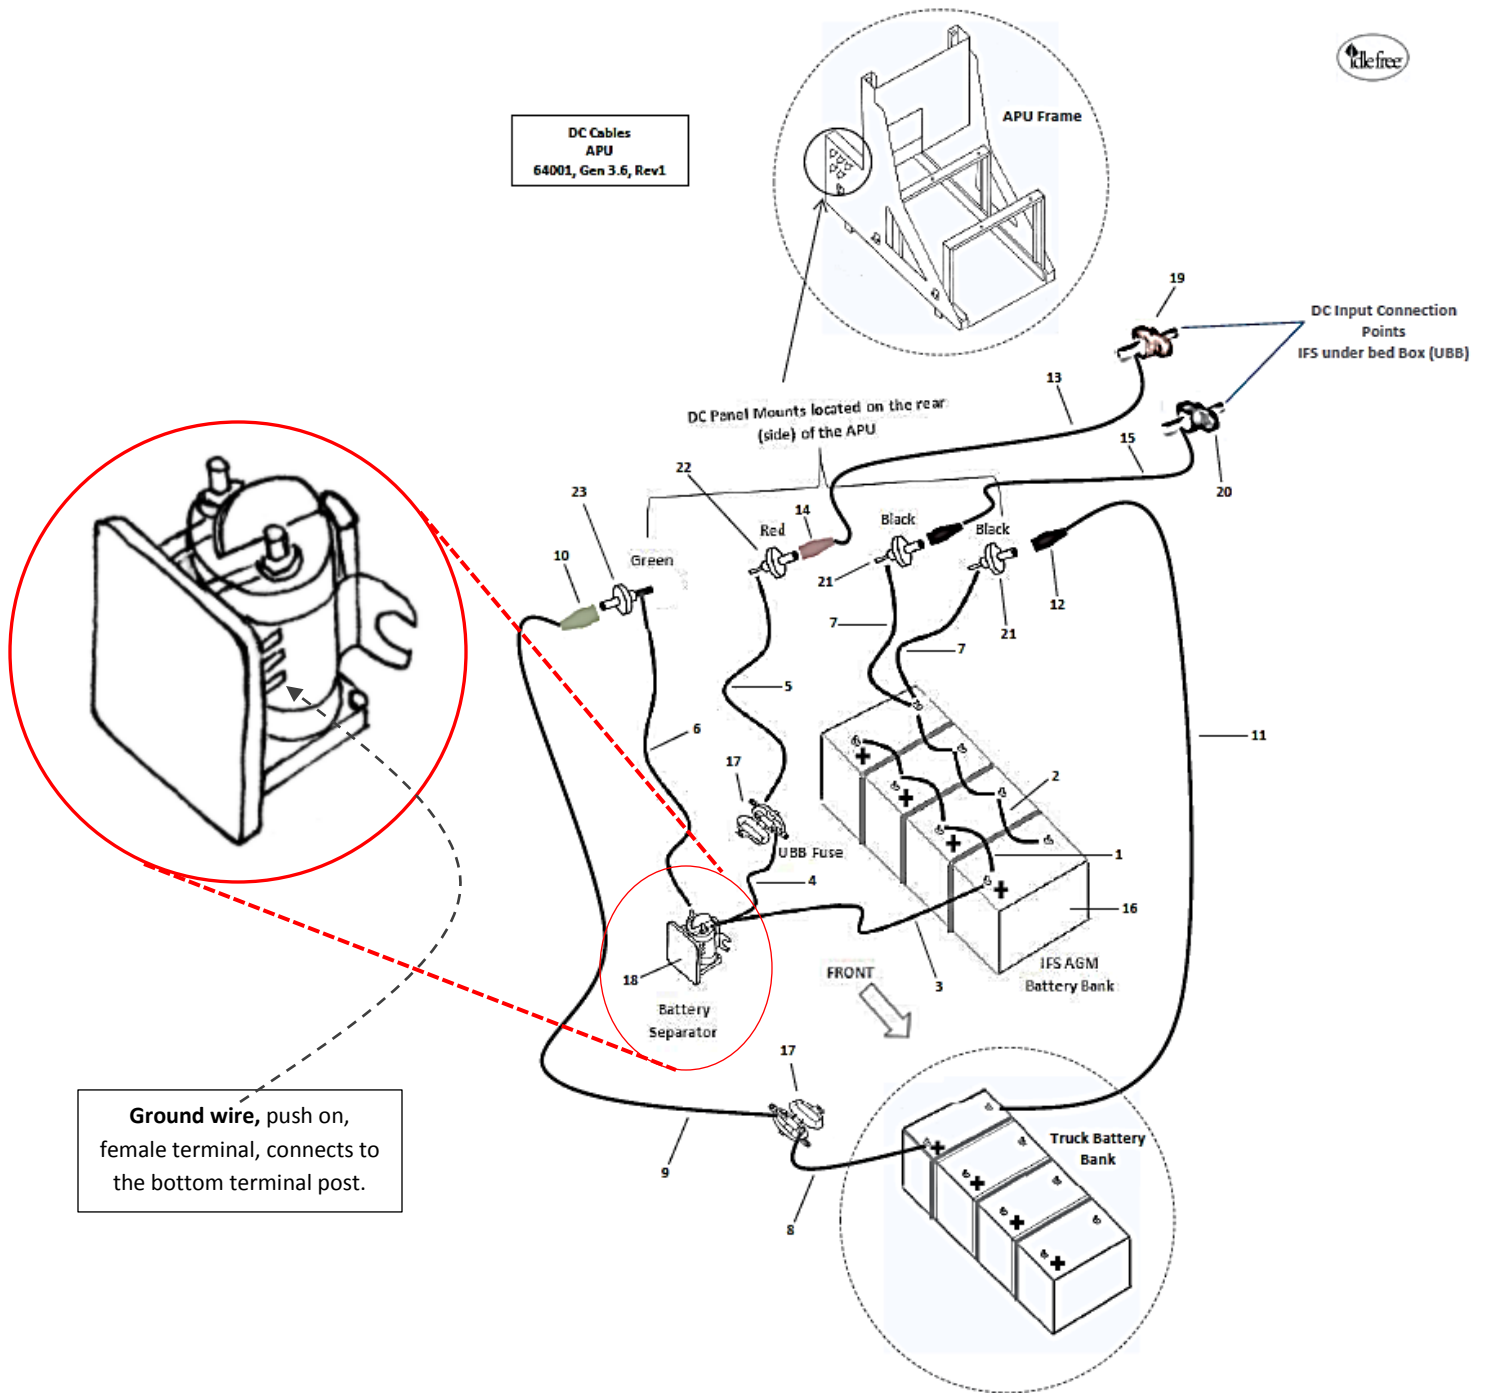

Battery Separator – RF101

Component Description & Application

Battery Separator


IFS Part # 35004

Component Location

APU, exterior
Top Level, front
Above outside battery

Tools Needed

DC Clamp AMP Meter
DC Volt Meter

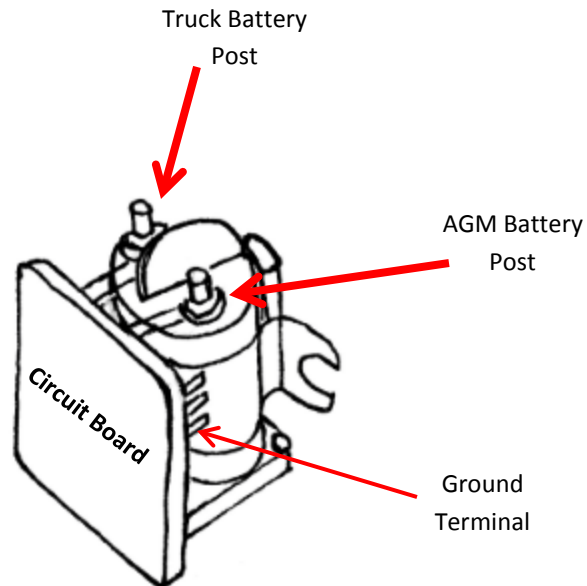

Component Check Procedure

Check for DC voltage on the truck battery post on the top of the battery separator. Use the ground terminal on the battery separator for the meter's ground lead. This voltage is the truck's starter battery voltage.

If the truck's engine is running this voltage should be alternator output voltage, >12.7VDC.

If no voltage is present, check for DC voltage on the GREEN male connector on the DC input side of the APU, (previous page).

If alternator voltage is present (>12.7 VDC), clamp the AMP meter around the cable connecting to the Truck Battery Post. The DC AMPS should be proportional the DC Voltage, High AMPS = Low Volts.

If no amperage is read on the meter understand that the battery separator is not closed or is not connected to the AGM battery bank.

The truck's voltage must be higher than 13.2 VDC to activate the circuit board that will close the battery separator when the truck's battery voltage rises to 13.2 VDC or higher.

If the battery separator is working:

1. The voltage on both top posts will be the same
2. The amperage read on the clamp meter will be the same on the truck battery cables as the amperage reading on the AGM battery cable
3. The voltage and amperage will be proportional to each other; an Amperage reading of 100 AMPS DC will mean a low alternator DC Voltage, 13.0 VDC.

The Battery Separator will operate (close) based on a voltage rise from either the truck's battery bank or the AGM battery bank. The Idle Free AC to DC Power Converter (Shore Power, RF104) is connected to the AGM battery side of the battery separator. When shore Power is being used the AGM side of the battery separator will control the closing of the battery separator.

Battery Separator – RF101

Component Description & Application

Component Check Procedure (continued)

If the Battery Separator is not functioning when either of the top posts has >13.2VDC, remove the ground wire from the ground terminal (Battery Separator terminal) and place the negative probe from your volt meter into this terminal end of the ground wire. Check for DC voltage on either Battery Post to confirm that a ground is present on the Ground terminal harness. This test will ensure that the wire is bringing a ground to the battery separator's circuit board. If a ground is present on the ground terminal wire, suspect a bad battery separator.

Proper Diagnostic work needs to be done prior to replacing the battery separator.

The battery separator may be working if the battery voltage is below 13.2 VDC but above 12.8 VDC.

The Battery Separator will close its contacts when either of its battery posts rises above 13.2 VDC. The battery separator will remain closed until the contacts drop to 12.8 VDC.

12.7VDC	12.8	12.9	13.0	13.1	13.2	13.3	>13.3
Not	connected	←————→			Connected	←————→	
	Connected	←————→					

The Top Line Blocks represent the initial DC Voltage when the battery separator was open (not –connected) and the filled in blocks show the battery separator connected.

The Second line shows what the DC Voltage can look like once the separator closes, both battery banks will remain connected together until the DC Voltage drops to 12.8 VDC

Component Check Procedure (continued)

If the Battery Separator is connected for only a few seconds and then disconnecting a problem exists in the truck's charge circuit. When the battery separator continues to close and then open, the battery separator is closing at 13.2VDC however the combined battery voltage (both battery banks) drops to below 12.8VDC and the separator opens.

This condition can be caused by:

1. Bad Starter Battery
2. Loose Cable Connections
3. Alternator too small
4. Either battery bank deeply discharged

If one of the battery banks has a DC voltage of 11.5 VDC or less, it is recommended that the batteries in this bank be tested individually.

It is common to find that the truck's battery bank contains a bad starter battery.

A bad truck starter battery will not allow the Idle Free AGM batteries to properly charge.

Replace defective truck starter batteries.

Loose or un-connected battery cables will not enable AGM battery charging.

DC Voltage Display – RF102

Current DC Voltage Level of IFS AGM Battery Bank

DC Volt Meter

IFS Part # 32026

Component Location

Truck Interior

Bunk Area

Connected to the back side of the

UBB (REF Sheet, 63110)



Description & Application

The DC Voltmeter is used as an Idle Free AGM battery Fuel Gauge.

The DC Volt Meter is connected to the Under Bed Module (RF110).

The flat magnet is located on the back side of the DC Voltmeter.

The DC Voltmeter has a 6 foot cord used to enable the use of the Voltmeter in the driver's living area.

Overview

The Voltmeter is divided into 2 halves, top and bottom.

The bottom half represents the battery voltage when the truck's engine is not running.

The top half of the voltmeter displays the voltage when the truck's engine is running or when the truck is plugged into Shore Power.

If the truck's engine is running, a least one of the top 3 lights should be lit.

The longer the truck engine runs, the more lights will be lit.

The voltage reading of this volt meter should be the same as the trucks battery voltage when the truck's engine is running.

If the battery voltage on the truck's dash is higher than the voltage reading on this voltmeter (>.5 Volts), trouble shoot the DC Connections Service Procedures (IFS # 63004).

Common Issues

The Voltmeter has no history of issues.

Service

The voltmeter does not require any service

This Page
Intentionally Blank

Thermostat, RF103

Thermostat - Description

Thermostat

IFS Part # 37012

Component Location

Bunk, above Bed, Side wall or closet



Description and Application

The Idle Free Thermostat contains a LCD display and two Slide Switches.

The IFS Thermostat uses two AA Batteries to power the display and to send switch signals to the Idle Free Relay Group (RF106).

The left slide switch is used to turn on the air conditioner or turn on the heat. The center position of the left slide switch turns the system OFF.

The right slide switch has two positions marked AUTO & ON.

The AUTO position is used if the system user wishes to have the air conditioner's evaporator fan turn on and off with the air conditioning compressor circuit. Leaving this switch in the ON position will continuously run the evaporator fan regardless of the compressor's current mode.

The driver should place the Fan Switch in the ON position for best system performance. Placing the Thermostat Fan switch in the ON position will eliminate 10% of the Inverter start up power needs.

The IFS Thermostat has two soft push buttons located under the LCD Display.

The center soft button is used to display the current room temperature and turn on the display's backlight.

The right soft switch increases the temperature setting of the thermostat and the left soft button decreases the temperature of the room setting.

A low Voltage Battery Indicator Icon is shown on the display when the AA batteries need to be changed.

HEAT MODE

The thermostat is used to turn on the Idle Free water heater and the Heat relay (Relay Group RF106).

The thermostat when in HEAT Mode provides 12VDC power to the Truck's Bunk Blower fan, The Thermostat's temperature settings are not used in Heat Mode, The truck's bunk controls are used to provide Bunk Heat temperature control.

Technical Information

The Idle Free Thermostat can be separated from its mounting base.

The mounting base contains terminals for the wiring harness the runs between the thermostat and the UBB (REF Sheet #63110).

The Thermostat is used to operate the Relay Group located in the UBB (RF106).

The Thermostat is supplied with 12VDC Power from the 2AMP fuse located on the front of the UBB (RF108).

The 12 VDC power enters the thermostat base on the red wire, R terminal (Jumped) to a second R marked terminal.

The thermostat switch positions determine where, how and when 12VDC power is sent to the UBB Relay Group.

- G Terminal - Green wire; 12VDC to the Evaporator Relay
- Y Terminal - Yellow Wire; 12 VDC to the Compressor Relay
- B terminal – Blue Wire; 12VDC to the Heat Relay

The back side of the Thermostat includes 3 DIP switches that need to be in the proper position for the Thermostat to Function Properly

1. CONV/HP = HP
2. F/C = F
3. HE/HG = HG


Common Failure Issues

User fails to understand that the left Mode switch in A/C mode has a 5 minute delay between ON then OFF then ON. This causes confusion and is dealt with by instructing the driver to place right switch in the auto position to see if the Thermostat is in the 5 minute delay window. If the evaporator fan is not running when the Mode switch is in COOL mode, the thermostat is in the 5 minute delay mode.

Drivers need to operate the Thermostat with the Fan Switch in the ON position. The ON position eliminates the need to start the Evaporator Blower fan and the compressor at the same time.

Thermostat, RF103

Thermostat - Description

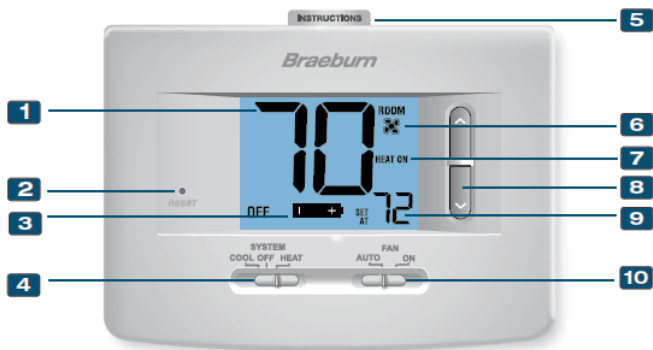


Switch	Factory Default
CONV / HP	CONV
F / C	F
HE / HG	HG

Thermostat
DIP Switch
Settings

- 1 Room Temperature**.....Displays the current room temperature
 - 2 Reset Button**.....Resets thermostat back to factory defaults
 - 3 Low Battery Indicator**Indicates when the batteries need to be replaced
 - 4 System Switch**.....Selects system preference
 - 5 Quick Reference Instructions**Stored in slot at top of thermostat
 - 6 Fan Indicator**Indicates when the system fan is running
 - 7 System Status Indicator**...Displays information about the status of the system
 - 8 Arrow Buttons**Used to increase or decrease settings
 - 9 Set Temperature**Displays the current set point temperature
 - 10 Fan Switch**.....Selects the system fan mode
- Battery Compartment**.....Located in the back of the thermostat

Wiring Terminations

Terminal	
Rc	Red Wire, 12VDC IN from Thermostat harness
Rh	
0	Not Used
B	Blue wire, Heater ON
Y1	Yellow wire, Compressor ON
G	Green wire, Evaporator ON
W1	Not Used
C	Not Used

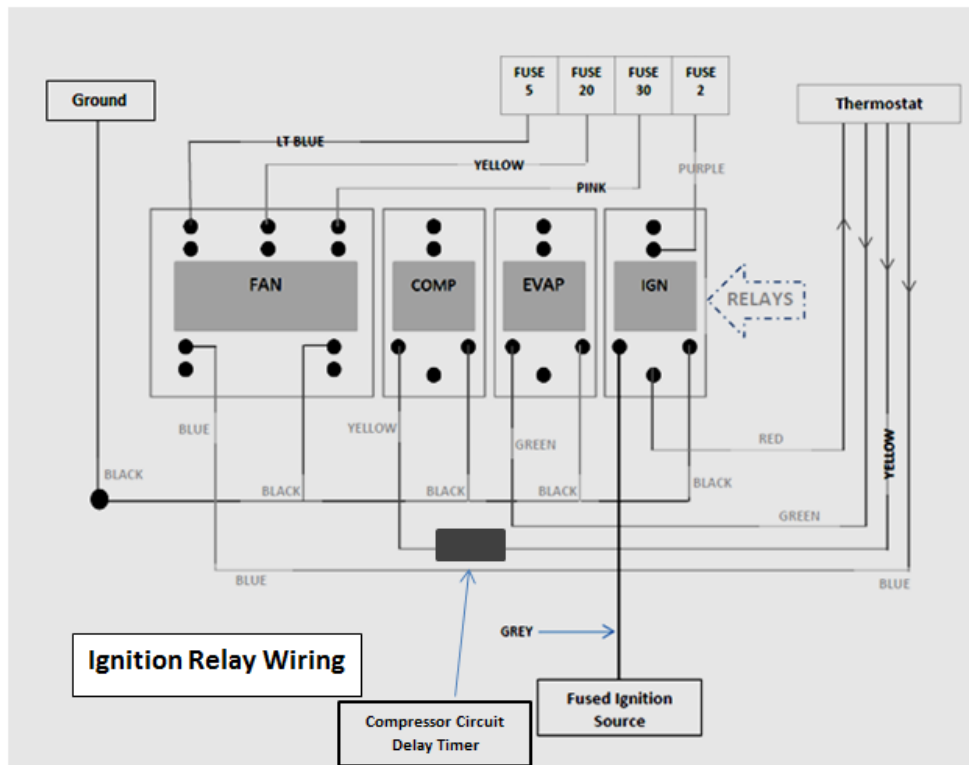

Power Converter RF104


Shore Power – Description

Power Converter, 120VAC to 12VDC

Shore Power
IFS Part # 35003

Component Location

UBB, Under Bed Module, Upper level

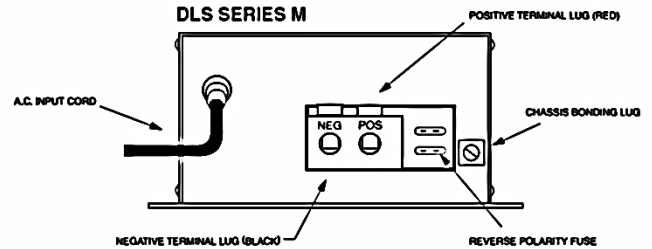

Description and Application

The Idle Free Power Converter converts incoming 120VAC power (Shore Power) to 12VDC power.

When Shore Power is available, the converter maintains the Idle Free AGM battery voltage.

The Power Converter has a rated amperage output of 55 AMPS DC. The Idle Free air conditioner uses less than 50 AMPS DC and when using the Power Converter (Shore Power), the AGM battery voltage level maintains 12.6 VDC or higher.


Whenever the Power Converter's DC voltage rises past 13.2VDC, the Idle Free Battery separator closes and connects the Idle Free battery bank to the truck's battery bank (Battery Separator RF101). If the combined voltage of both battery banks remains above 12.8VDC, both battery banks will remain connected and both Battery banks will receive a charge from the Idle Free Power Converter.

The Power Converter's 120VAC circuit begins on the truck's exterior with a covered receptacle (male) that is used to receive the female end of an extension cord.

The Power Converter's DC circuit begins at the bulkhead DC Connection posts on the lower back corner of the UBB (UBB RF108)

Potential Issues

1. Installer connects a ground power supply cable to the wrong (+ or -) battery post. This action causes the Power converter's DC fuses to fail. The (2, 30 AMP) fuses are located on the rear side of the Power Converter.
2. Shore Power (plugging in) is perceived to be a direct use of 120VAC power that directly powers the 120VAC Idle Free air conditioning circuit. Shore Power is only used to convert AC to DC. The inverter is always the 120VAC power provider for the Idle Free air conditioner.

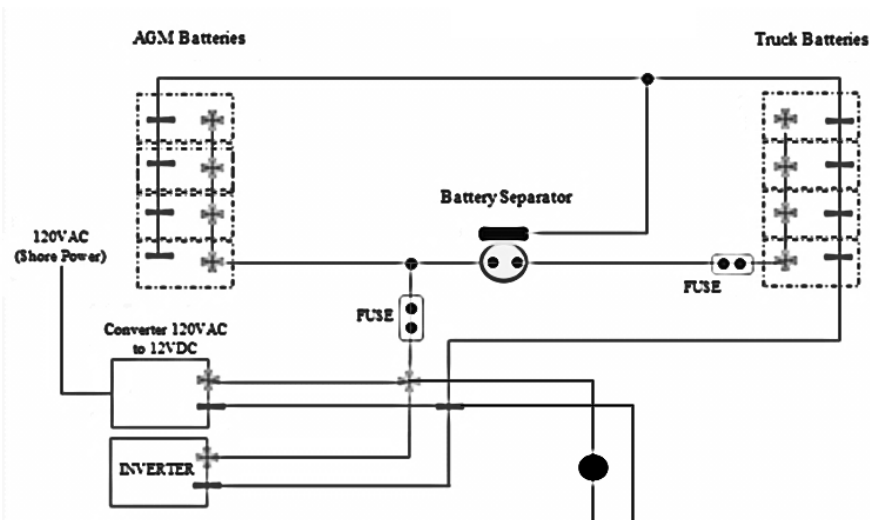

This Page
Intentionally Blank

Inverter RF105

Inverter, 12VDC to 120VAC

IFS Part # 35002

1500 Watt, Sine Wave



Component Location

UBB, Under Bed Module, Lower level

Description

The Idle Free Inverter provides 120VAC sine wave power for the Air Conditioner's Compressor and Evaporator Blower Fan. The Inverter is rated at 1500 watts continuous with a 3000 watt Surge Capacity.

The Inverter has a GFCI outlet that is used to protect against electrical shock hazards.

The Inverter is located in the UBB Module (RF110), lower level.

The Inverter is installed with Stand-By mode activated. Stand-by mode is used as an automatic ON/OFF feature (shuts off automatically, ON with load > 20 watts).

A 120VAC Power Strip is included with the Idle Free system. The power strip can be used to power driver needs. Some small wattage 120VAC convenience devices can be powered with the inverter (if managed properly).

Application

120VAC Inverter Power is sent from the Inverter through two relays to activate the 120VAC Compressor circuit and the 120VAC Evaporator circuit. Both Relays are controlled with a 12VDC signal from the Idle Free Thermostat (RF103).

The Compressor Relay sends it 120VAC to the exterior located APU.

The Exterior APU Module's Compressor 120VAC Circuit contains a pressure switch, condenser fan relay, run capacitor, start capacitor, and a compressor.

The Evaporator Relay sends its power to the Evaporator module to power the single speed 120VAC Blower fan typically located in a bunk closet.

Component History, Issues

1. GFCI will trip occasionally when Idle Free system is turned off suddenly by starting the truck. The user manual instructs the driver to turn OFF the air conditioner with the Thermostat Only.
2. The Inverter may over load (Red Light condition) if the Start Capacitor is not properly connected to the run capacitor. The connection quality is a factor especially after a year of operation. Service is required for the electrical APU Harness, Clean, Tight, & Corrosion application for all APU electrical connections.
3. Inverter may shut down if 1500 watts is exceeded or 3000 watts surge is exceeded. The Inverters maximum output is exceeded when the air conditioner is turned off for a few seconds and then back ON by turning the Ignition key ON and then OFF.
This action forces the air conditioner to attempt to start however the pressure present on the high side Freon circuit may be too high for the inverter (output) to overcome. The correct USER procedure is to turn the air conditioner off using the slide switch on the face of the thermostat.
4. The inverter may overload if a microwave is used that exceeds the maximum output rating of the inverter. This tends to be the case on any microwave rated at >700watts. The microwave rating is based on run watts not the watts needed to start the microwave. Idle Free cannot control what is plugged into the inverter and the user needs to understand the inverter parameters.
5. Drivers need to understand the "Do's and Don'ts" when using the Idle Free air conditioner. The inverter will display LED lights that will show the reason for the inverter shut down. Learning to properly react to these indicators will eliminate most inverter issues.
6. A permanent label/sticker is affixed to the underside of the UBB Cover. This information label contains helpful information for troubleshooting the inverter.

Inverter RF105

3-3. Protections Features:

Model	DC Input (VDC)					
	Over Voltage		Under Voltage Alarm	Under Voltage		
	Shut-down	Restart		Shut-down	Restart	
12 V	15.3	14.2	11.0	10.5	12.5	

3-1-6. Status : Display Power & Fault Status

Green LED	LED Signal	Status
Solid	—————	Power OK
Blink (Slow)	- - - - -	Power Saving
Red LED	LED Signal	Status
Blink (Fast)	- - - - -	OVP
Blink (Slow)	- - - - -	UVP
Blink (Intermittently)	- - - - -	OTP
Solid	—————	OLP

3-1-3. Input Level : Display Input Voltages

LED Status	DC 12V	DC 24V	DC 48V
RED Blink (slow)	10.5~10.9	21.0~21.8	42.0~43.6
RED	10.9~11.3	21.8~22.6	43.6~45.2
ORANGE	11.3~12.0	22.6~24.0	45.2~48.0
GREEN	12.0~14.0	24.0~28.0	48.0~56.0
ORANGE Blink	14.0~14.7	28.0~29.4	56.0~58.8
OVER RED BLINK	14.7†	29.4†	58.8†

3-1-4. Load Level : Display AC Loads (Watts)

LED status	DARK	GREEN	ORANGE	RED	RED BLINK
SK1500	0 ~ 75W	75 ~ 495W	495 ~ 1125W	1125 ~ 1450W	Over 1450W

Troubleshooting guide :



WARNING!


Do not open or disassemble the Inverter.
Attempting to service the unit yourself may result in a risk of electrical shock or fire.

Problems and Symptoms	Possible Cause	Solutions
"No AC Power Output"		
STATUS illuminates the red LED		
a. Blinking fast	Over input voltage. (OVP)	Check input voltage. Reduce input voltage.
b. Blinking slow.	Low input voltage. (UVP)	Recharge battery. Check connections and cable.
c. Blinking Intermittently.	Thermal shutdown. (OTP)	Improve ventilation. Make sure ventilation openings in inverter are not obstructed. Reduce ambient temperature.
d. Solid ON.	Short circuit or Wiring error. Overload.(OLP)	Check AC wiring for short circuit. Reduce load.

The **STATUS** light is the bottom light on the face of the inverter, to the right of the GFCI, 120vac outlet.

Inverter RF105

Top Light:
DC input voltage light

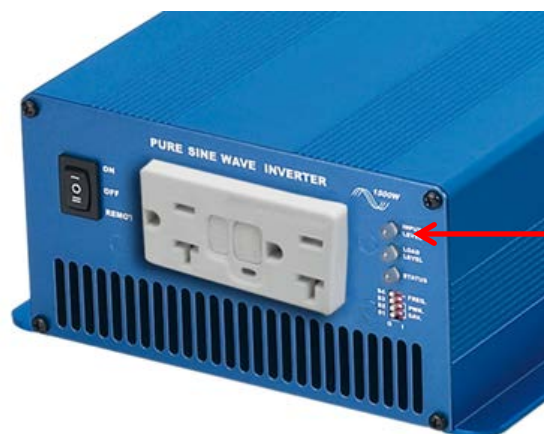

Problems and Symptoms	Possible Cause	Solutions
"No AC Power Output"		
STATUS illuminates the red LED		
a. Blinking fast	Over input voltage. (OVP)	Check input voltage. Reduce input voltage.
b. Blinking slowly.	Low input voltage. (UVP)	Recharge battery. Check connections and the cable.
c. Blinking Intermittently.	Thermal shutdown. (OTP)	Improve ventilation. Make sure ventilation shafts in the inverter are not obstructed. Lower ambient temperature.
d. Solid ON.	Short circuit or Wiring error. Overload.(OLP)	Check AC wiring for short circuit. Reduce the load.

3-1-3. Input Level : Display Input Voltages

LED Status	DC 12V
RED Slow Blink	10.3~10.6
RED	10.6~11.0
ORANGE	11.0~12.1
GREEN	12.1~14.2
ORANGE Blink	14.2~15.0
OVER RED Blink	15.0+

Inverter RF105



Center Light:
Inverter load level

Center Light:

Inverter load level

This center light will not be lit when the inverter is in stand-by mode or if the inverter is turned off or if the GFCI outlet is tripped.

3-1-4. Load Level : Display AC Loads (Watts)

LED status	DARK	GREEN	ORANGE	RED	RED BLINK
SK1500	0 ~ 120W	120 ~ 495W	495 ~ 1125W	1125 ~ 1450W	Over 1450W

3-1-6. Status : Display Power & Fault Status


Green LED	LED Signal	Status
Solid	—————	Power OK
Slow Blink	- - - -	Power Saving
Red LED	LED Signal	Status
Fast Blink	- - - - -	OVP
Slow Blink	- - - -	UVP
Intermittent Blink	OTP
Solid	—————	OLP

Normal
Power Saving Mode

Plugged into shore Power or Reefer
Running (OKAY)

Out of Battery Power
Overheated (ventilation)

Inverter was over loaded

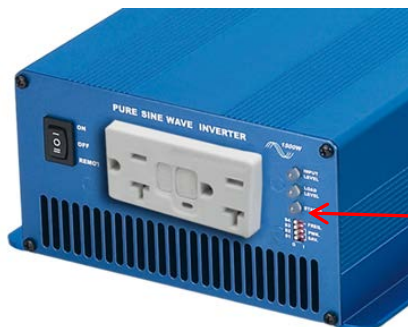

Bottom Light:

Status Light

This light is the key to what is happening to the inverter and knowing its status will help determine what the fix is.


Inverter RF105

GFCI Reset Procedures

1. Locate the GFCI Outlet, found on the end of the inverter.
2. Turn the inverter OFF using the black switch, located to the left of the white 120VAC outlet.
3. Turn the Inverter ON using the black switch, located to the left of the white 120VAC outlet.
4. Push the Reset Button in within 5 seconds of turning the inverter switch to the ON position.

OR

1. Locate the GFCI Outlet found on the end of the Inverter.
2. **Push and Hold** the **Reset Button "IN"**.
3. Turn the Inverter Switch to the **OFF** position.
4. Turn the Inverter Switch to the **ON** position.
5. Holds reset button IN until you feel it Click.

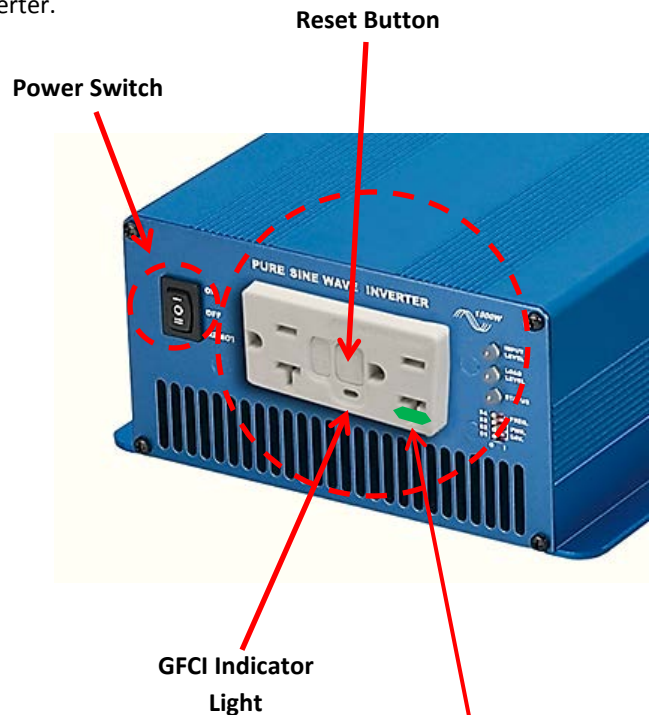

Note; on some Inverter models the GFCI indicator light is located in this location.

Inverter RF105

Inverter Diagnostics

The Idle Free Inverter has all the indicators in place to determine why it is or is not working.

The Top indicator light is the Input DC voltage

The Bottom indicator light is green or flashing green when the inverter is ON or in stand-by mode

The Center Indicator light is only lit when an inverter load is present, Green = Okay, Red = too High

The GFCI has its own indicator light that replicates the bottom light (Status) Green or Flashing Green.

If the bottom light is RED the GFCI indicator light will not be lit because the inverter is shut down when the status light is RED.

The inverter is fused internally with non-replaceable fuses. The inverter fuse power from the AGM battery bank is located in the APU, exterior frame mounted unit, above the battery separator.

The inverter can be used as a diagnostic tool.

- The top light for battery voltage level input
- The Center light as a load light green = Okay, Red + too High
- Bottom Light why the inverter shut down (Red Light = Over load), (Flashing Red = Battery voltage too low)
- Bottom Light gives current state of the inverter, Green = OKAY, Flashing Green = Stand-By

Relay Group – RF106

Power Relays, explanation

Relay Group

Component Location:

Truck Interior
Bunk Area
UBB, upper level
UBB (REF Sheet, RF110)



Description & Application

The Relay Group is made up of 4 Ice Cube Relays.

The Relays are mounted on a DIN Rail, in the upper portion of the UBB.

The Relays are used to power the Thermostat, Evaporator Fan, Compressor Circuit, & Heat Circuit.

The Relays use a 12VDC coil.

The **Heat Relay** is a single pole, triple throw relay (SPTT)

The **Compressor Relay**, the **Evaporator Relay** and the **Ignition Relay** are single pole; single throw relays (SPST)

The **Ignition Relay** controls 12VDC (2 AMP fuse) power used to power the Thermostat.

The **Ignition Relay** is wired to use the normally closed contacts within the relay. When the truck's ignition is turned on, 12VDC power is sent to the **Ignition Relay** and the normally closed contacts are opened.

Opening the **Ignition Relay** circuit (truck ignition ON) disables the Thermostat functions (Heat and Air conditioning) (RF103).

The **Evaporator Relay** controls 120VAC power that is used to run the evaporator blower fan.

The **Evaporator Relay** is wired to use the normally open contacts within the relay. When the thermostat is set to turn on the evaporator fan, the 12 VDC coil is activated and the 120VAC is sent through the relay to the evaporator fan.

The **Compressor relay** controls 120VAC power that is used to run the compressor circuit.

The Compressor Relay is wired to use the normally open contacts within the relay. When the thermostat is set to turn on the compressor circuit, the 12 VDC coil is activated and the 120VAC is sent through the relay to the APU (exterior), compressor circuit (RF112).

The **Heat relay** controls 12DC power that is used to run the Truck's Blower Fan circuit.

The Truck's Blower fan circuit is switched to Idle Free battery power whenever the Heat relay is activated.

The Heat relay is activated by moving the thermostat mode switch to HEAT.

The Heat relay is wired to use the normally closed contacts and the normally open contacts, within the relay. When the thermostat is set to the HEAT mode, the 12 VDC coil is activated and 12VDC fused power from the Idle Free battery bank is sent through the relay, to the Truck Fan motor and fan control circuits (1 -3).

When the relay is not activated (Heat switch is OFF or ignition switch is ON), the normally closed circuit passes through the truck's blower fan power needs with 12 VDC "Truck Battery Power".

The 3 circuits in this relay are not all used for every truck.

Instructions are included in the installation manual regarding the circuits needed for each truck brand installation application.

Overview

The Relay Group is controlled by the Thermostat.

The Thermostat (RF103) sends 12VDC signals to the individual relays in the Relay Group.

The Relay Group contains *Ice Cube Relays*.

Ice Cube (type) Relays enable the use of both ac and dc voltages through the relay contacts.

Common Issues

The Relay Group has no history of issues.

Service

The Relay Group does not require any service

Relay Group – RF106


Power Relays, explanation

✗ **≡** Not Used


Direction of
Current Flow



Top View of Relay Group


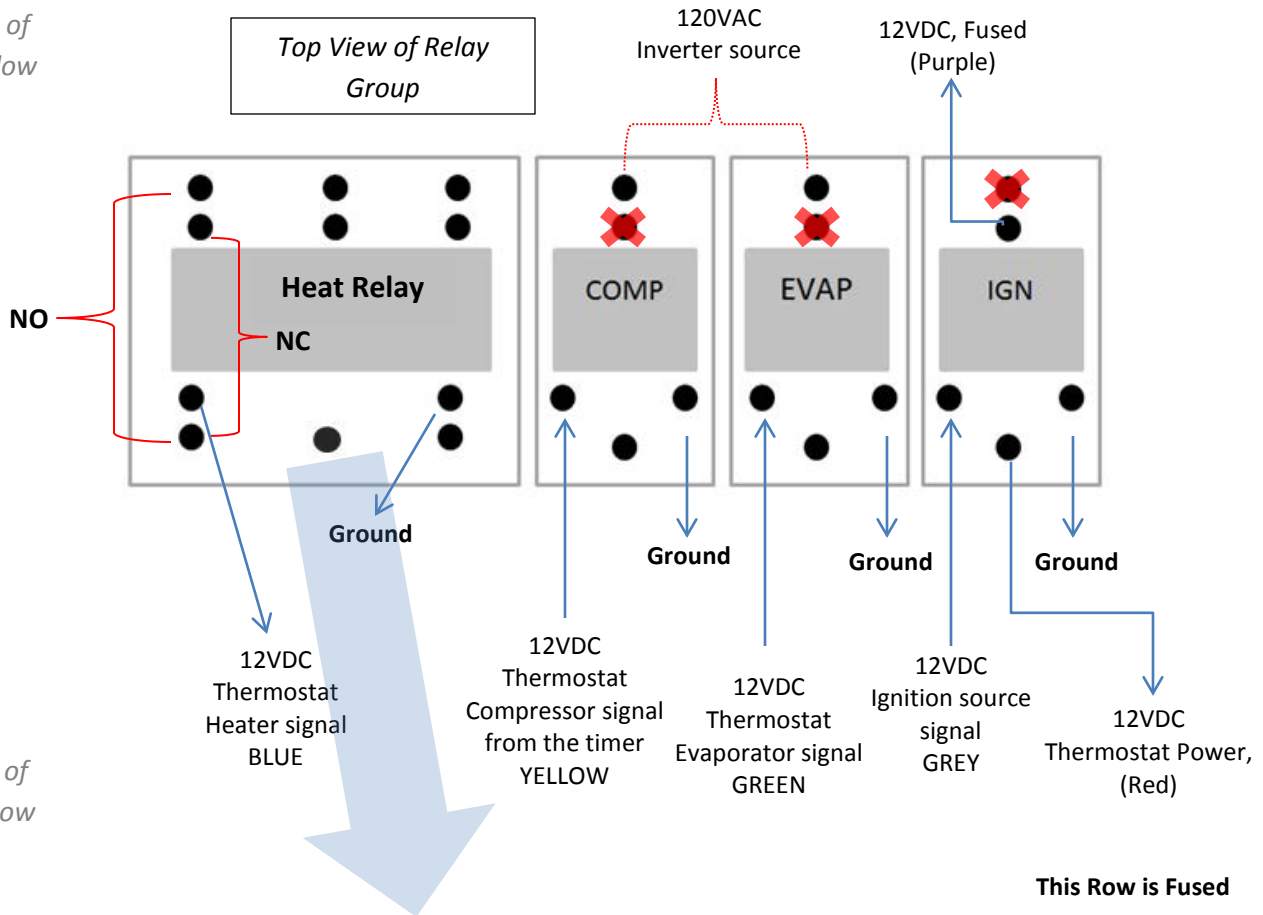


Direction of
Current Flow

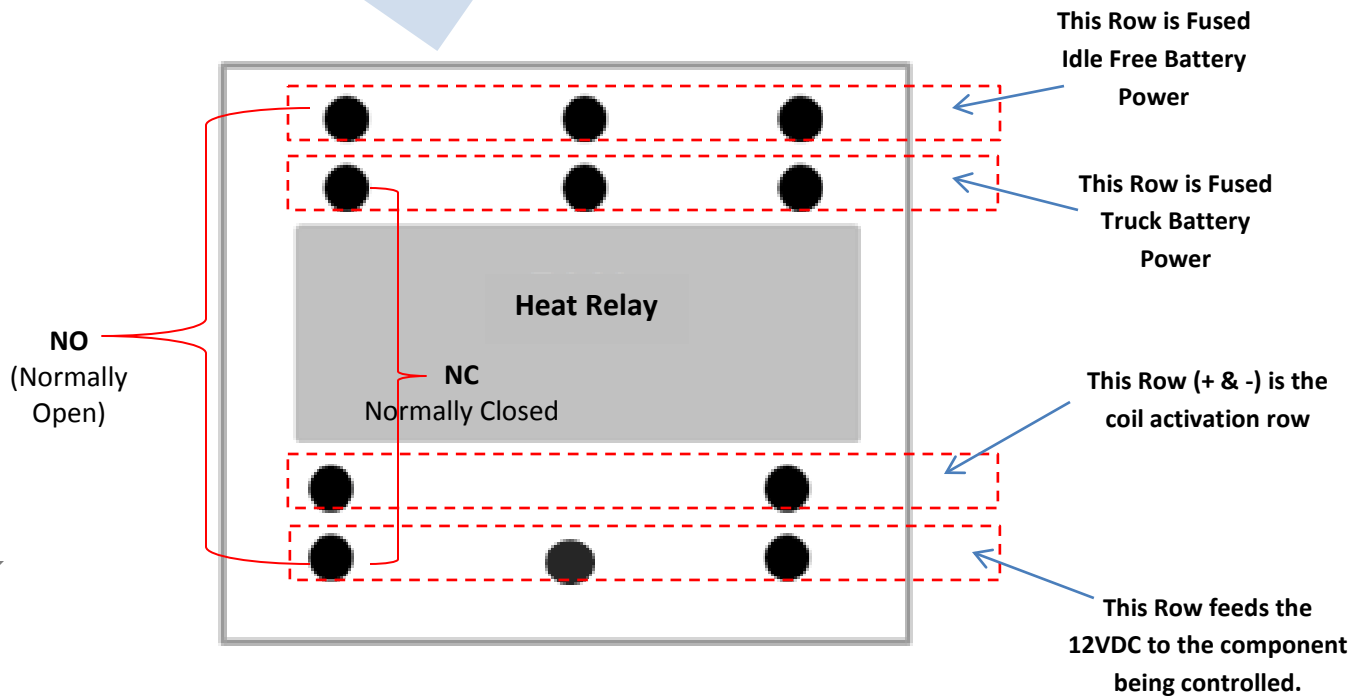


Relay Group – RF106

Power Relays, explanation

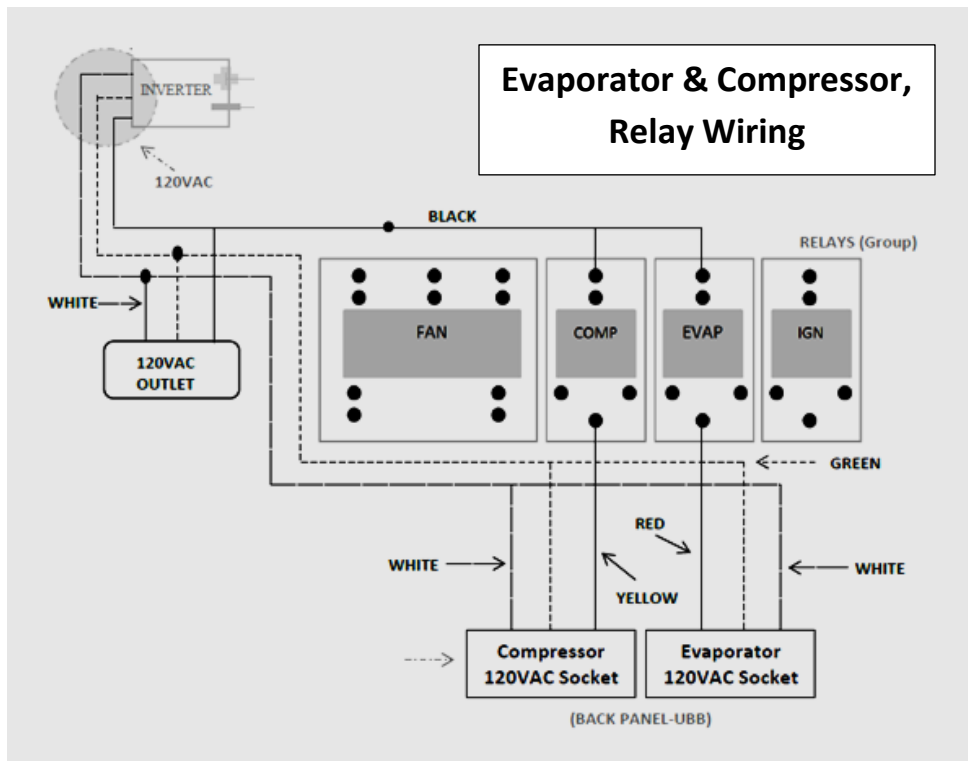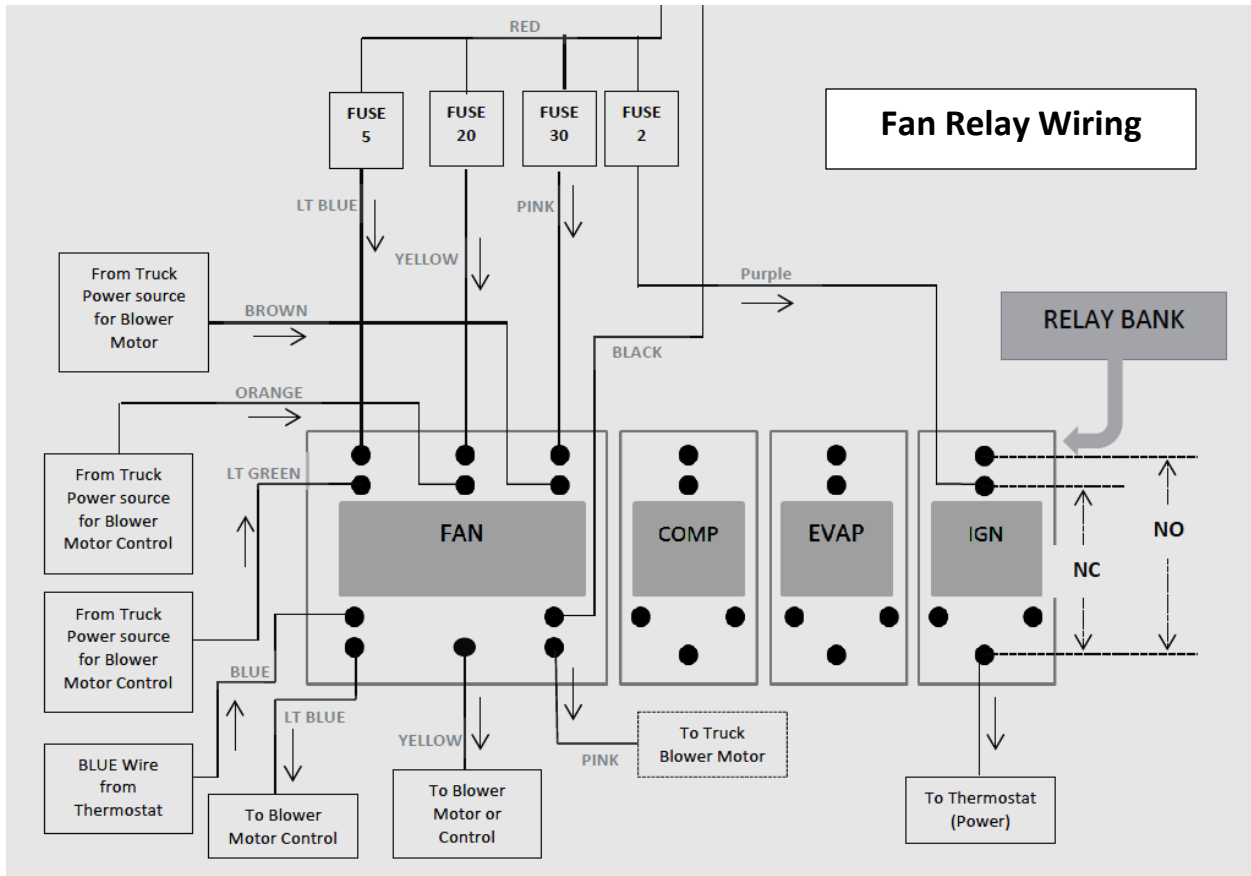

Relay Group – RF106

Power Relays, explanation

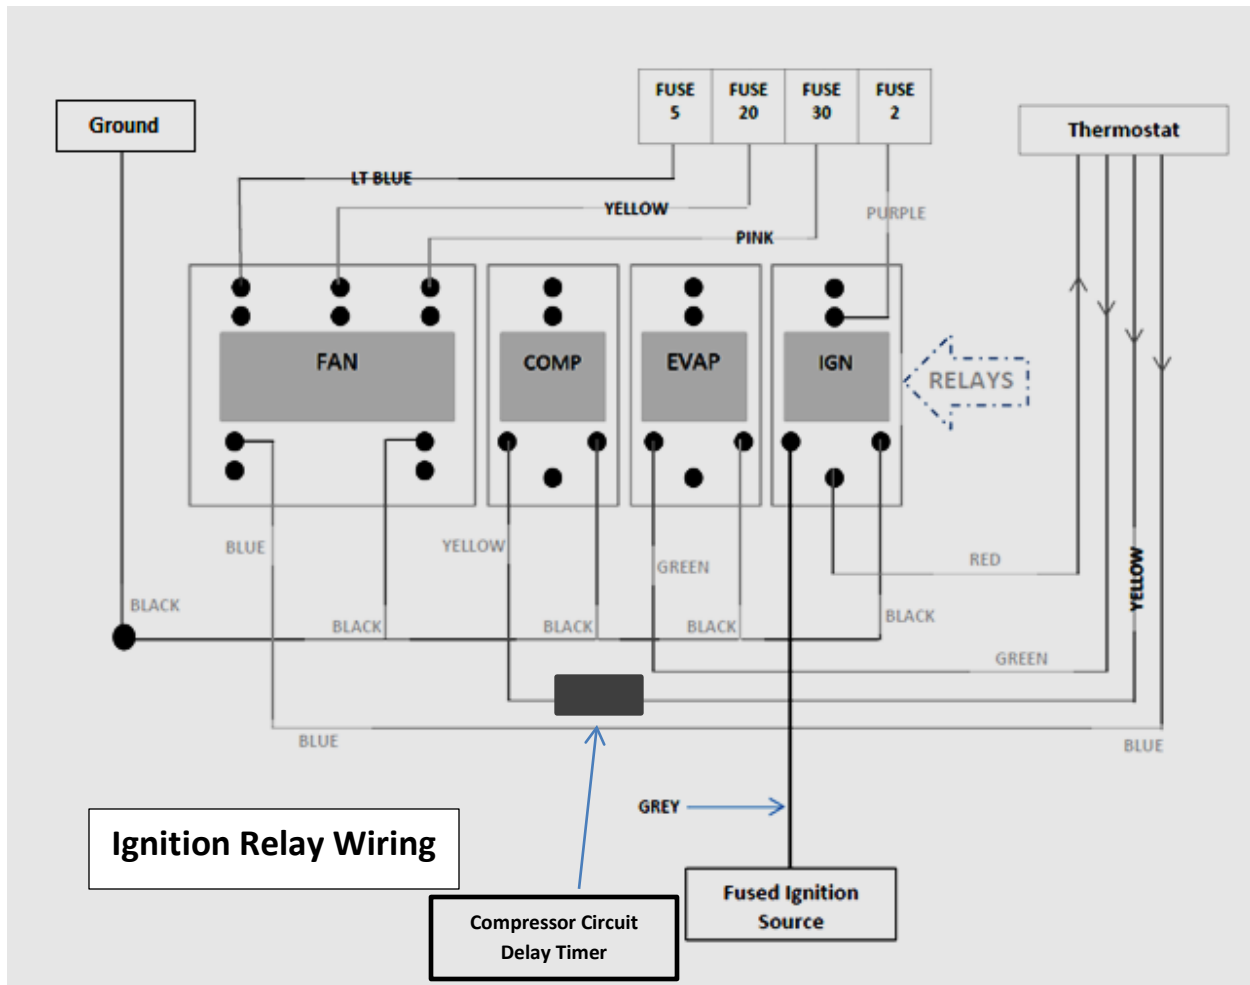

Troubleshooting:

Use the relay Black 18 gauge wires for ground service connections

Ignition relay must be OFF (not activated) for any of the other relays to receive 12VDC power.

The evaporator relay and the compressor relay pass through 120VAC when activated by the thermostat.

The inverter must be turned on with a green or flashing green light located on the GFCI outlet. (RF105).

To check each relay for coil activation place your volt meter on DC and place probes into the relay coil terminals (page 13). Use the ground for the relay being checked,

The relay 12VDC+ wires are from the thermostat or the ignition source, colors for 12VDC coil operation are:

- Grey = Ignition Relay
- Green = Evaporator Relay
- Yellow = Compressor Timer & Compressor Relay
- Blue = Heat Relay, (triple relay)

From Thermostat

Relay coils are activated with 12 VDC from thermostat switches

Thermostat switch position determine 12VDC to relays

Ignition relay passes through fused 12VDC power when truck ignition is turned OFF

Evaporator relay passes through 120VAC when thermostat is in COOL mode or Fan switch is in ON mode

Compressor Relay passes through 120VAC when thermostat is in COOL mode and temperature setting is calling for COOL. Compressor Relay is delayed 8 seconds using a Timer relay.

Heat Relay passes through 12VDC when thermostat is in heat mode. Not all heat circuits are used for all trucks.

Fuse panel fuses all 3 heat circuits (RF108).

Relay Group – RF106

Power Relays, explanation

Timer for the compressor circuit

The Compressor Circuit includes a timer that delays the start of the compressor Circuit 8 seconds.

The compressor circuit will start 8 seconds after the thermostat calls for COOL. During the 8 second delay the evaporator fan will come on and be up to full speed.

The compressor delay circuit is used to eliminate the added surge power needed to start the evaporator blower fan.

The Thermostat sends its 12 VDC signal to the Time Delay relay prior to the Compressor relay.




Under Bed Box (UBB)



Relay Group – RF106

Power Relays, explanation

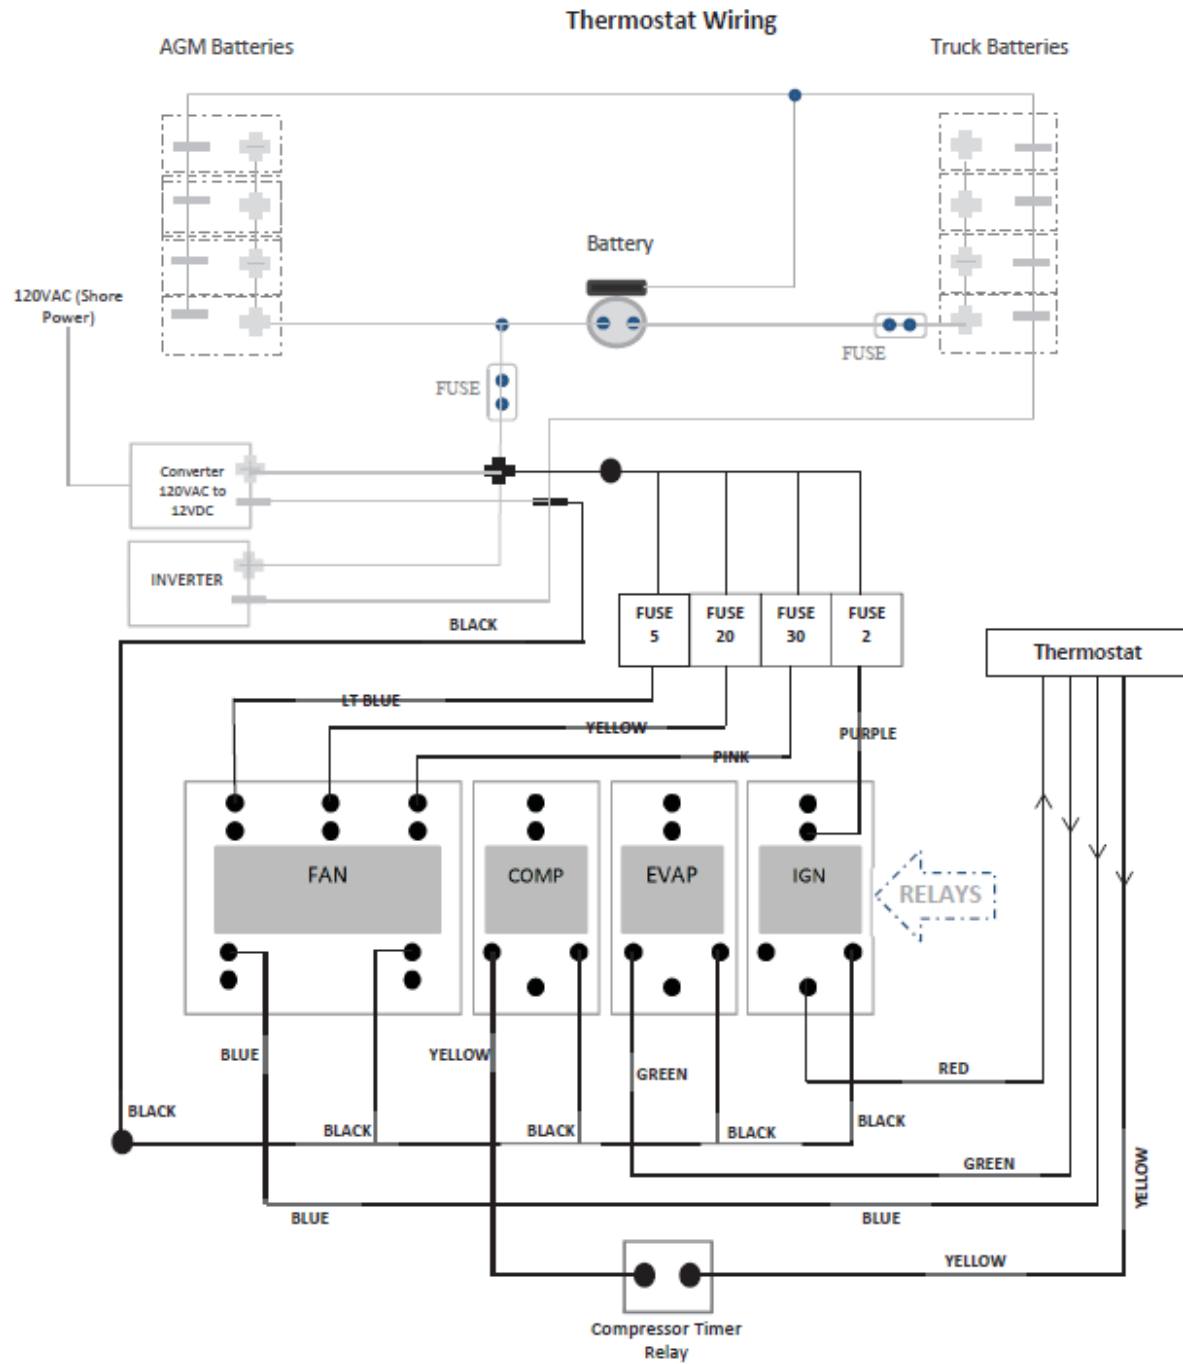

Ignition Cut-Out Circuit – RF107

Ignition Cut-out circuit, explained

Ignition Cut-Out Circuit

Component Location

Bunk Area

Connected to the back side of the UBB
(RF110)

Starts at a truck specific ignition source and
powers the UBB ignition relay

Description & Application

The DC Ignition Cut-out circuit is used to disable the Idle Free system when the truck's engine is running.

The Ignition Cut-out circuit sends fused 12VDC power from the ignition source to the UBB.

The Ignition Cut-out circuit cuts the 12VDC power to the Thermostat when the truck's engine is running.

Issues

1. The Ignition Cut-out circuit has been installed incorrectly on rare occasions. When the installation instructions are not followed, the ignition cut-out circuit is connected to the accessory circuit instead of an **ignition only** circuit. This causes the Idle Free air conditioner or heater to shut off whenever the truck's ignition key is moved to the accessory position. When the user wants to listen to the radio, the Idle Free system shuts down.
2. The Idle Free system user turns the ignition key to the ON position without turning the air conditioner to the OFF position (thermostat). When the user turns the ignition key back to OFF, the Idle Free air conditioner is forced to start without a 5 minute delay (Delay is built into the Thermostat). The Idle Free air conditioner start attempt (forced) under these conditions may overload the inverter (RF105).

Service

The Ignition circuit does not require service.

The Ignition cut-out fuse location varies by truck application.

The Ignition cut-out fuse is located within 12 inches of the ignition connection point.

Freightliner and International trucks begin the ignition cut out circuit at the ignition key.


The Mack Ignition cut out circuit begins at the dash panel (passenger side, top).

The Kenworth Ignition circuit begins in the fuse panel, on the floor behind the brake pedal.


Do not use the truck's ignition to turn off the air conditioner.

Always use the Thermostat Mode Switch to control Air conditioning and Heat functions.

1st Relay is
Ignition

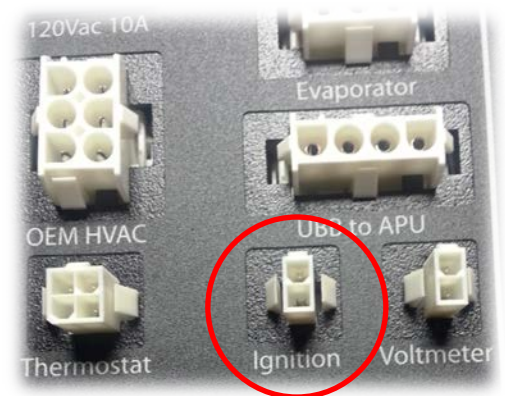

Ignition harness plugs into
the back of the UBB

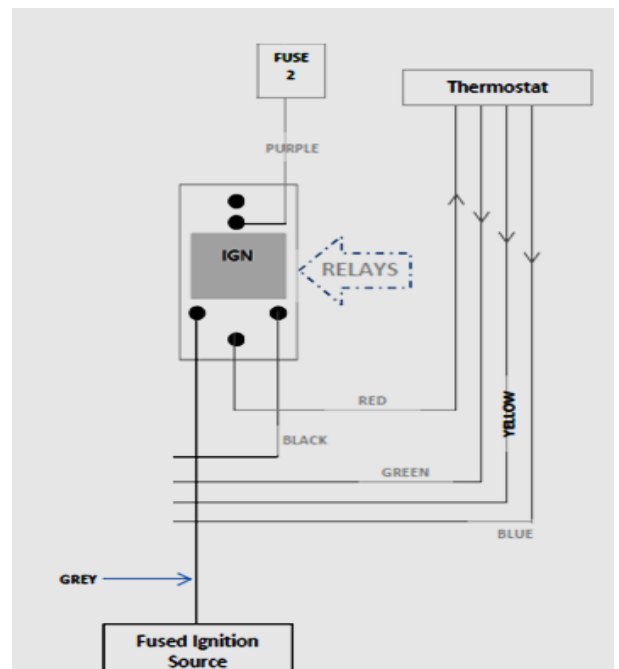

This Page
Intentionally Blank

DC Fuse Holder – RF108

DC Fuse Holder - UBB

DC Fuse Holder

IFS Part # 36003

Component Location

Truck Interior

Bunk Area

Connected to the inside, top level of the UBB (RF110)

Description & Application

The DC Fuse Holder contains 4 openings for fuses.

The top fuse is always a 2 AMP fuse that powers the Volt Meter (RF102) and the Thermostat (RF103).

The 2nd fuse (from the top) powers the bunk Blower fan when the Idle Free water heater is a part of the system. This fuse is a 30 AMP fuse. *(For Mack and KW trucks the remaining fuse positions are not used.)*

The 3rd & 4th fuses (from the top) are only used in some (truck specific) applications where bunk heater control is a part of more than one circuit. International, Freightliner, & Volvo require fuses place in positions 3 & 4.

When an Idle Free Heater is a part of the system, truck specific instructions are included along with the OEM fan harness Kit (IFS Part# 91801). Kit 91801 includes the fan harness, installation instructions and fuse placement instructions.



Heat Relay

(see RF 106)



Fuse 2
30AMP
12 Gauge, Pink

Fuse 3
20AMP
14 Gauge, Yellow

Fuse 4
10AMP
18 Gauge, Lt Blue

Overview

The DC Fuse Holder may contain up to 4 fuses.

The top fuse is used in all applications (see above paragraph).

Fuse #2 is used in all heater applications and contains a 30 AMP fuse used to provide power for the Bunk Blower fan. This fuse supplies fan power whenever the Idle Free Heater is activated by turning the Thermostat Mode switch to Heat (RF103).

Fuses 2, 3, & 4 (positions from top) are connected to the bottom row of the Heat Relay.

Fuse 2 uses a 12 Gauge wire.

Fuse 3 uses a 14 gauge wire.

Fuse 4 uses an 18 gauge wire.

History

The DC Fuse Holder can be fused incorrectly during installation.

Fuse placement instructions are included with every heater harness installation Kit.

This Page
Intentionally Blank

ReeferLink Connection– RF109

ReeferLink, Explanation

ReeferLink Connection

Component Location

APU & Reefer Unit

Description & Application

The Idle Free ReeferLink Technology is patented and should not be used to power other battery based APUs.

The Reefer Unit must have an alternator rating of 65 AMPS or greater.

The Idle Free ReeferLink connection Kit should be used to supplement the Idle Free APU system.

The ReeferLink Connection Kit consists of 4 parts:

1. APU DC Connection cables, internal and panel mount receptacles (fused).
2. Truck connection connector, body & cover.
3. Trailer connection connector, body & cover (fused).
4. Truck to Trailer interconnects Cable set.

The ReeferLink Connection provides the 12VDC power available when the Reefer unit is running to be used to maintain the Idle Free APU battery bank voltage and the trucks 12VDC Battery voltage levels.

Refrigerated Trailers include electrical systems that start the reefer unit when contents of the trailer require temperature management.

Refrigeration units will start their engines when the starter battery requires charging. A starter battery voltage of <12.1VDC will engage the start circuit of the reefer unit. If the Idle Free ReeferLink connection is in place the reefer unit will engage its start circuit whenever the reefer's battery and the Idle Free battery bank drop to <12.1VDC. The reefer unit will continue to operate until the alternator output amperage drops to <8 AMPS.

When the reefer unit is running, with the Idle Free ReeferLink connection in place, the following will take place:

1. Reefer Battery and Idle Free Battery bank will see alternator output voltage and amperage.
2. Reefer Output Amperage will be based on:
 - a. APU Mode (air conditioning or Heat)
 - b. Battery voltage level of Idle Free battery bank, Reefer starter battery, truck starter battery bank.
3. Reefer Alternator will close the Idle Free battery separator when the Idle Free battery bank rises to 13.2VDC.

The truck and trailer can be connected (ReeferLink Connection), when the truck is moving, in the event that:

- a. Truck's alternator fails
- b. Reefer's alternator fails

The trucks alternator can be used to keep the reefer units 12VDC systems operating by using the ReeferLink Connection.

The reefer unit's alternator can be used to keep the truck's 12VDC systems operating by using the ReeferLink Connection.

The Reefer Unit must have an alternator rating of 65 AMPS or greater.

The reefer connection kit (reefer portion) includes a 250 AMP in line fuse.

The reefer connection kit (reefer portion) DC connections must be made in this way; connect the negative cable to the reefer battery negative post & connect the positive reefer connect positive battery cable to the positive output post on the alternator.

The alternator must be rated at 65 AMPS or greater.

The positive connection must be made at the reefer alternator positive output post.

Overview

The Idle Free Reefer Link system is a controlled DC connection between the truck and the reefer unit.

The ReeferLink connection provides battery charging for the Idle Free APU.

In addition, the controlled DC connection between the truck and the trailer allows the truck or the reefer unit to supply power to each other.

In the event that a truck alternator or a reefer alternator fail, the ReeferLink connection is used to literally connect the 12VDC connections (truck and reefer trailer) together.

ReeferLink Connection– RF109

ReeferLink, Explanation

Overview (continued)

The Idle Free Reefer Link system will allow the reefer unit to start from the Idle Free APU batteries directly by connecting the reefer trailer to the truck using the ReeferLink interconnect Cable set.

Using the ReeferLink Connection to power the APU has the benefit of using nontaxed fuel for non-road use.

ReeferLink Connection Kit consists of 4 parts:

1. *APU DC Connection cables, internal and panel mount receptacles (fused).*

The APU has internal cables added along with DC panel mount receptacles. The added panel mount receptacles added to the side of the APU provide a quick connect point for the truck side of the ReeferLink Connection Kit. The APU DC Connections are fused with a 250 AMP fuse to protect the truck and trailer.

2. *Truck connection connector, body & cover.* The truck connection portion is mounted near the connection point on the back of the bunk where the air hoses and electrical cord is housed for the standard truck to trailer connections.
3. *Trailer connection connector, body & cover (fused).* The trailer connection kit includes a 250 AMP fuse used to protect the truck and reefer unit from short circuits. The trailer portion of the ReeferLink Connection uses a permanent mount for the Anderson connector. This mount is typically mounted near the electrical plug-in and the air-line connection point.
4. *Truck to Trailer Interconnect Cable set.* The Truck to Trailer Interconnect Cable Set is typically kept in the driver's side box. This connection can be made anytime however it is best practice to only mate the truck and trailer together when the need arises or when the truck is stationary.

Service

The ReeferLink Connections require regular service. This service includes:

1. Checking for tight connections
2. Checking for Clean Connections
3. Adding battery terminal Dielectric grease to terminal connection points

Troubleshooting

The ReeferLink Connections can be checked using a DC Voltmeter.

1. Check the Reefer side Anderson Connector for DC Voltage by placing the Voltmeter probes onto the lugs located inside the connector body. The Anderson connector body has + or – indicator markings on the connector body near the terminal connection points.
2. If DC voltage is not present, check the 125 AMP fuse, alternator connection, and the Reefer's Battery connections.
3. The truck side ReeferLink Connector should always show APU DC battery voltage. Check the Reefer Link connector located on the back side of the bunk for 12VDC power. If 12VDC power is not present, check the APU panel-mount connectors (exterior of APU). Remove the panel mount connectors (Counter clockwise to remove, clockwise to tighten)
4. You should always have 12VDC at the APU panel-mount connectors. If no DC is present, remove the back cover from the APU and check for loose or missing connection points.

History of Issues

The ReeferLink issues include:

1. Cables between the truck and trailer un-secured during driving periods resulting in lost or broken cables.
2. Wrong DC + connection point (battery + instead of alternator +) resulting in the reefer's control display showing a fault code.

UBB – RF110

Under Bed Box, Explained

UBB, Under Bed Box or Under Bed Module

Component Location

Truck Interior
Bunk Area
Under Bed, Floor mounted



Description & Application

The UBB (Under Bed Box) is the connection module for the Idle Free System

The UBB contains the following components:

1. Inverter (RF105)
2. AC to DC Power supply (Shore Power)(RF104)
3. Relay Group (RF106)
4. DC Fuse Holder (RF108)
5. Timer Relay, Compressor Circuit (RF106)

The back side of the UBB Box contains connection Hubs for the following Components:

1. DC Cables (From APU)(RF113)
2. Ignition Harness (RF107)
3. Volt Meter (RF102)
4. Thermostat (RF103)
5. Evaporator Fan (RF111)
6. Shore Power, Harness Connection point from Power inlet plug.
7. Compressor Circuit, includes water heater signal wire (Blue)
8. 120VAC (10 AMP) connection socket
9. OEM HVAC (Fan harness connections for Truck bunk blower fan)(RF106)

Overview

All components contained in the UBB and all components that plug into the UBB have their own reference sheets (RF).

The underside of the UBB Cover includes a troubleshooting guide.

The UBB is used for diagnostic entry into the Idle Free system.

The Relay Group is tested to see if DC voltage from the Thermostat is reaching the relays.

The inverter GFCI reset is located on the end of the inverter, located in the lower level of the UBB (RF105).

Common Issues

The UBB has a history involving GFCI tripping of the inverter or red light conditions on the inverter. These issues go away after the driver better understands how to properly use the system (RF105).

Service

The UBB does not require any service however connection quality needs to be maintained and proper ventilation needs to be present around the UBB to allow for air flow to the inverter and the AC to DC Power Converter



UBB – RF110

Under Bed Box, Explained

What is a GFCI?

GFCI is an acronym that represents Ground Fault Circuit Interrupter. A GFCI continuously monitors the current in both the LOAD and neutral leads. If a current imbalance of approximately 5mA is encountered, a GFCI will trip, opening the circuit. This current imbalance often comes from a ground fault on either the LOAD or NEUTRAL circuit. The ground fault comes from current travelling to the chassis, through wiring, components, or even a person. Contrary to popular notion, a GFCI is not a load protection device such as a breaker or a fuse. A GFCI does NOT protect against circuit overloads, LOAD-NEUTRAL SHORTS, OR ungrounded shocks. A tripped GFCI does not imply a circuit overload or failure.

Why Use a GFI?

The Idle Free system has been equipped with a GFCI to help protect drivers, service technicians, and equipment from shock hazards. While no form of protection is 100% foolproof, a GFCI adds a level of safety in an application where ground faults are preventable from corrosion and vibration.

How to Reset a Tripped GFCI


The Idle Free GFCI can be reset by pressing the RESET button on the face of the receptacle. An audible click will be heard and the green indication LED will illuminate if the GFCI has been reset successfully. The GFCI requires power to actively reset it. If the inverter is in the factory programmed power save mode, the GFCI will not have sufficient power to reset. Turn the inverter OFF by moving the rocker switch to the center position. Then turn the inverter back on by moving the switch to the upper position. The inverter will remain on for the next 6 seconds until resuming power save mode. It is during this 6 second window that the GFCI must be reset. The GFCI self-tests upon every reset; if the GFCI refuses to reset properly, it is possibly failing.

GFCI Nuisance Tripping

Often times, a GFCI will repetitively trip without having a hazardous ground fault. This is referred to as nuisance tripping. Nuisance tripping typically means that a GFCI is functioning properly and is measuring a current imbalance. A small 'leakage current' is common and considered acceptable in many electronics from capacitive or inductive coupling and transient voltage surge suppressers. When added together, leakage from several different devices may exceed the 5 mA threshold. If nuisance tripping occurs, remove all devices from the Idle Free circuit, and add them back one by one until the fault occurs. The device tripping the GFCI has not necessarily failed, but may *not* have been designed for GFCI use. If the GFCI nuisance trips when only connected to the Idle Free system, a ground fault may exist and requires attention.

UBB – RF110

Under Bed Box, Explained

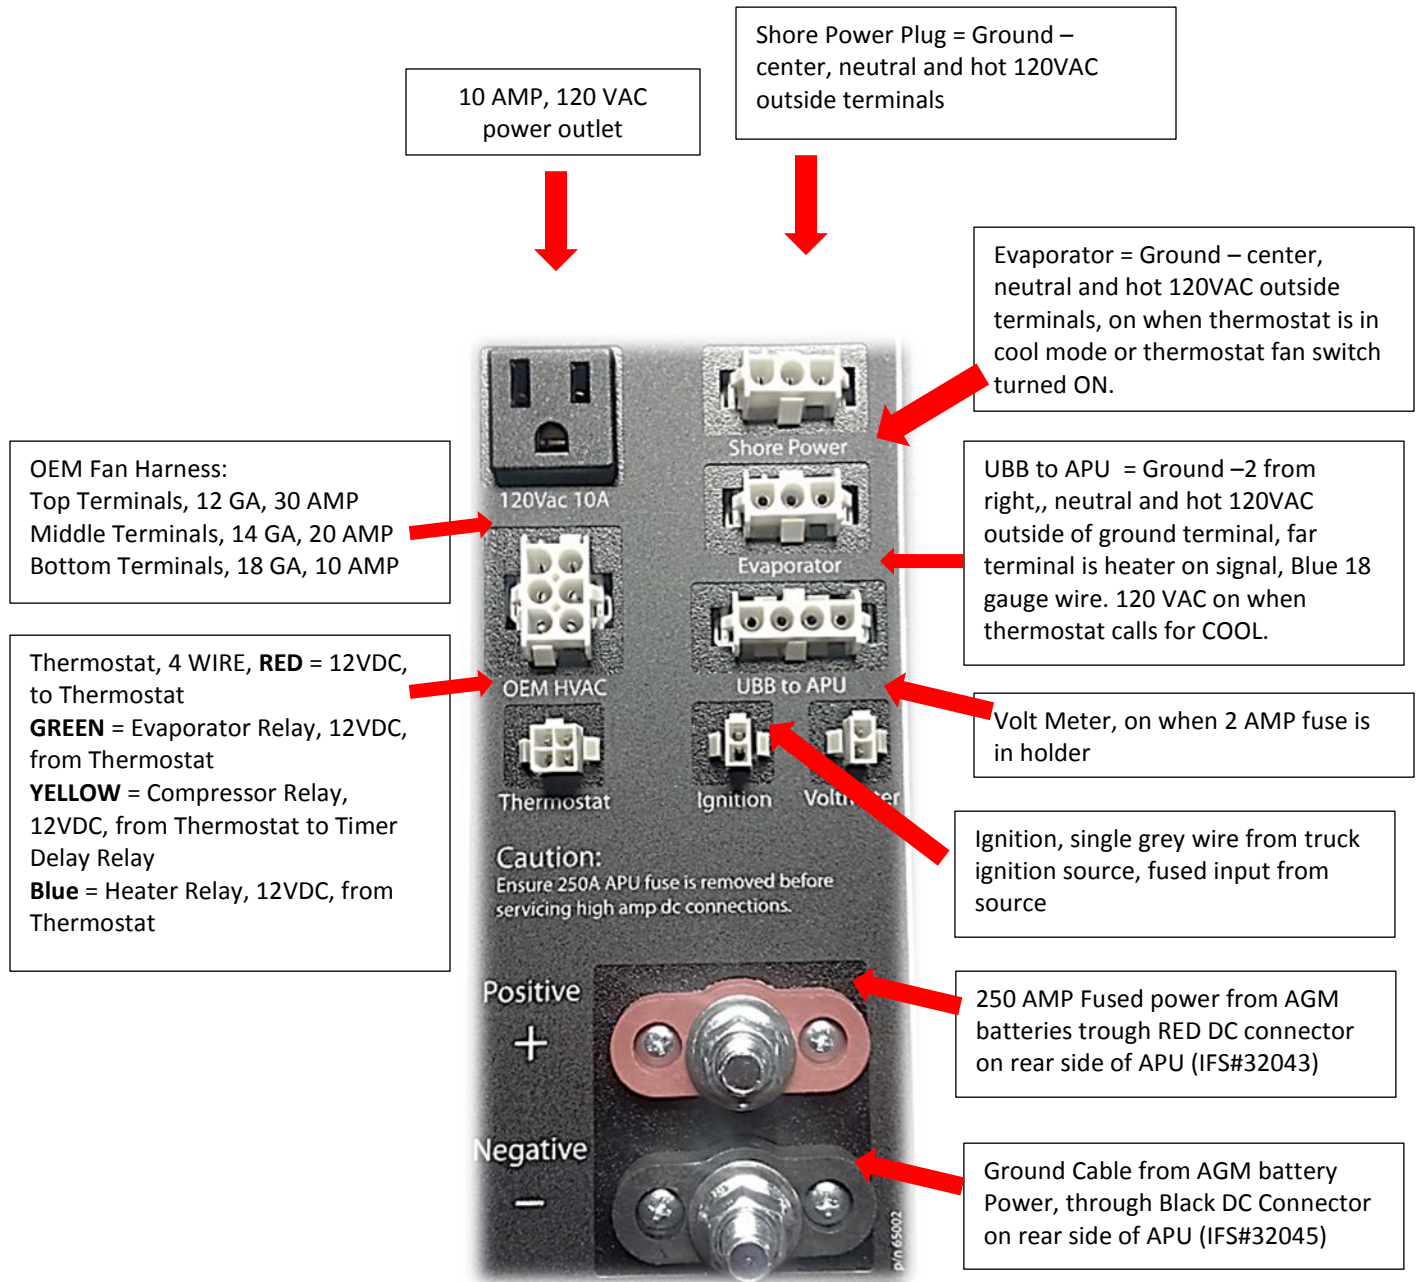

This Page
Intentionally Blank

Evaporator Module – RF111

Evaporator Module

Evaporator Module

IFS #91301

Component Location

Truck Interior

Bunk Area

Located in the closet, on the closet,
on a bunk side wall



Description & Application

The Evaporator Module contains an evaporator coil, an electric blower fan, and an expansion valve.

The Evaporator's blower fan is a single speed, 120VAC fan, controlled by the Thermostat switch settings (RF103) and the Relay Group (RF106).

The Evaporator coil and expansion valve control 134A refrigerant.

The Evaporator Module has 2 refrigerant hoses, a drain hose and a power cord exiting out the bottom of the module.

The refrigerant and drain hoses leave the bunk area through a 2" hole drilled into the base of the closet.

The Evaporator Module includes an aluminum filter (rear location).

The Evaporator Module weighs 25#s.

Overview

The Idle Free Evaporator Module is installed into the leaving area of the bunk.

Service

The Idle Free Evaporator has a removable aluminum filter that must be cleaned (water) in order to maximize performance.

History of Issues

The Evaporator must be maintained in a way that allows air to reach the rear side, filter.

Keep driver's personal belongings away from the Evaporators air intake (coil & filter)

During installation ensure that the screws used to secure the evaporator are not driven through the refrigerant core or the blower motor.

Suggestion; have user place the right Thermostat switch (RF103) into the ON position, not the AUTO position. Leaving the Thermostat in the ON position when in Air Conditioning Mode will keep the room in a consistent temperature range.

Trouble Shooting

The Evaporator Fan receives its 120VAC power from the Inverter. The inverter must have a Green status light or a flashing green status light to enable the evaporator fan.

The Thermostat must have its fan switch in the ON position to activate this fan motor OR the Thermostat must be in the COOL mode with a temperature set to below the current bunk temperature.

The Thermostat sends 12VDC to the Evaporator relay.

The evaporator relay (UBB, ice cube relay) passes through 120VAC when the relay coil receives 12VDC power (green wire) from the thermostat.

The connection point for the Evaporator is the UBB back side, 3 pin connector, 2nd from the top, marked EVAPORATOR.

The outside pins are used to test for 120VAC power, red and white wires.



This Page
Intentionally Blank

Compressor Circuit

Component Location
Truck Exterior
APU Frame Mount
Top Level, Harness

Description & Application

The Compressor Circuit connects the following components together:

1. Compressor
2. Heat Overload switch (Compressor Top)
3. Run Capacitor
4. Start Capacitor
5. Pressure switch (drier top)
6. In-line neutral connection

All components listed above use 120VAC.

Overview

1. The 120VAC Circuit begins in the APU with 2 **Black wires** connected to the pressure switch located on top of the Drier top. These connectors require a tight fit.
2. The next connection in the **Compressor Circuit** connects 2 in-line connectors together, blue wire into a white wire, using a male and female connectors, push together type. These connectors require a tight fit.
3. The next connection point is the **Run Capacitor**. The run capacitor has 5 connections divided into 2 connection points. (See figure #2). These connectors require a tight fit.
4. The next component is the **Start Capacitor**. The start capacitor is connected to the **Run Capacitor** using the 2 black wires, see Figure #2.
5. The next connection is the Compressor Top connections. 4 connectors are located under the plastic cover. The Heat overload switch receives the **Black wire** from the drier top. The short wire that leaves the overload switch connects to the **C** terminal on the compressor Top. The **Red wire** from the **Run Capacitor** connects to the Top of the Compressor onto the **S** terminal. The remaining Compressor top terminal is the **R** terminal and this terminal receives the **Blue wire** from the **Run Capacitor**. These connections require a tight fit.

Common Issues, History

The Compressor circuit has 2 areas to focus in on; Start Capacitor and Pressure switch (Drier top connections). These connections are the focal point when the compressor fails to start.

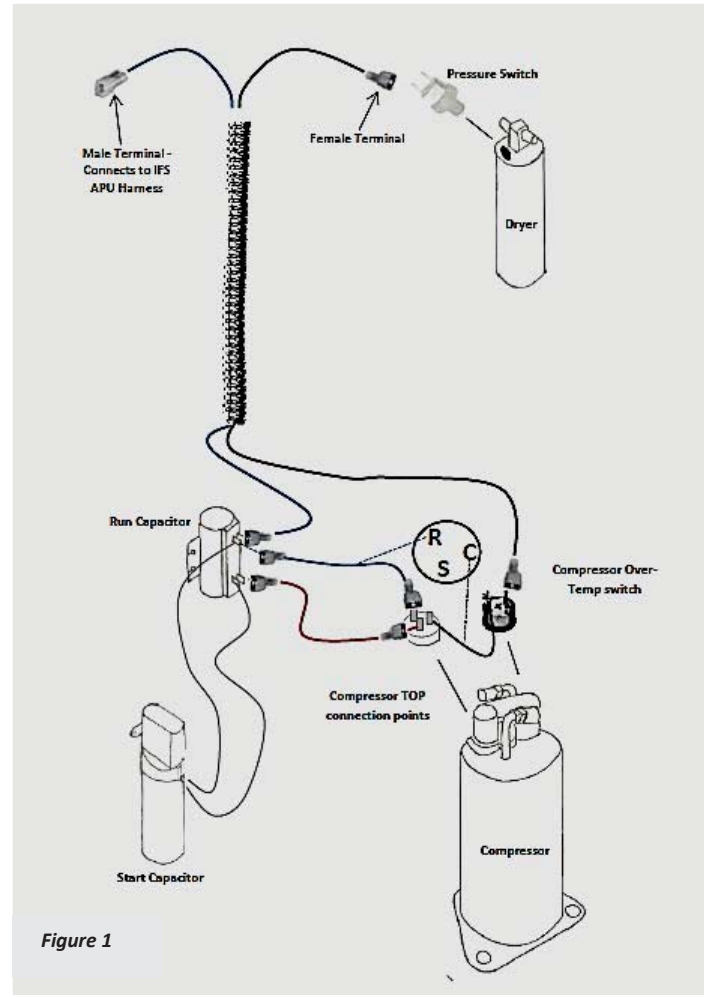


Figure 1

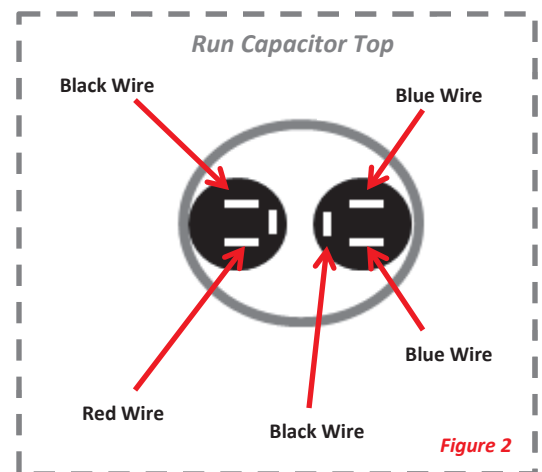


Figure 2

This page intentionally blank

DC Wiring, APU – RF113

Water Heater & Condenser fan Wiring

DC Wiring, APU

Component Location

APU, Exterior, Top Level
Fuse Holder to Component

Description & Application


The APU DC Circuit consists of:

1. Fuse Holder with 2 circuits
 - a. Water Heater (20 AMP)
 - b. Condenser Fan (15 AMP)
2. Water Heater Power Circuit
3. Condenser Fan Relay
4. Condenser Fan



Condenser Fan Relay
(120VAC Coil)

Water Heater & Condenser Fan
Relay Fuse Holder

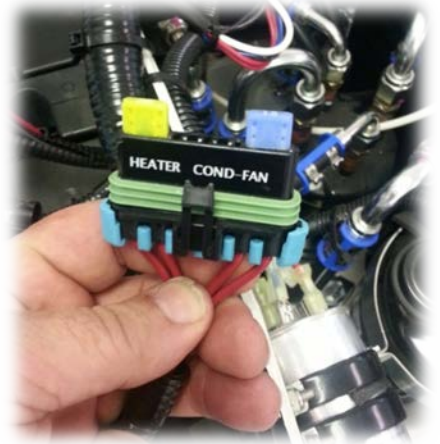

Overview

12VDC Idle Free Battery power feeds a 2 place fuse holder located near the battery separator in the upper level of the APU (exterior).

The fuse holder contains 2 fuses, 20 AMP fuse for the Water Heater and a 15 AMP fuse for the Condenser Fan.

The Water Heater fuse feeds 12VDC power to the Water Heater power plug located on the top of the Water Heater (oval plug).

The Condenser Fan fuse feeds 12 VDC power to the Condenser Fan Relay located above the Drier on the aluminum wall, in the top level of the APU (exterior).

The 12VDC power from the Condenser Fan Fuse is sent to the Condenser Fan when the 120VAC Compressor circuit is energized (RF 112).

The Condenser Fan Relay has a 120VAC coil.

Common Issues, History

The DC Wiring, APU has no history of issues.

The condenser fan circuit must be fused with a 15 AMP Fuse; a 10 AMP fuse will not support the start needs of the Condenser Fan.

Service

The APU DC Circuit requires basic service to ensure that the fuse terminals, the relay terminals and the Power connectors are clean and tight.

Make sure that the connector gasket on the water heater top Power connector is in place (green in color).

Note; the Water Heater Power plug connector into the top of the water Heater can be used to reset the water heater in the event that the Water Heater has stored faults codes (5) and needs to be reset (RF 114).



Water Heater
Power Plug



Condenser Fan
Power Plug

This Page
Intentionally Blank

Water Heater Module – RF114

Water Heater Module, Explanation

Water Heater Module

IFS Part # 42001

Component Location

Truck Exterior

APU

Top Level, Left side



Description & Application

The Idle Free Water Heater is located in the APU (Exterior).

The Water Heater consists of:

1. Webasto TSL17 Coolant Heater
2. Dosing Pump (Fuel Pump)
3. Fuel Filter & Fuel Circuit
4. Coolant Circuit

The **Webasto TSL17** is a 17,000 BTU coolant heater that is connected to the engine's coolant circuit. When the truck's engine is running, the engine's coolant is circulated through the engine block, cab heater core, Idle Free Coolant Heater, and bunk heater core.

When the truck's engine is shut off and the Idle Free Heater Module is turned ON, the engine's coolant continues to flow through the Engine Block, and both Heater cores (Cab & Bunk), by means of the 12VDC circulating pump, attached to the Webasto TSL17 Coolant Heater.

The Water heater monitors the coolant's temperature, as the coolant flows through the truck's coolant circuit.

Once the truck's coolant temperature drops to 138 degree (F), the Water Heater begins its "start-up cycle".

The truck's engine thermostat will close when then engine's coolant temperature drops below 180 degrees. When the engine block thermostat is closed, the size of the coolant system is decreased.

When the Idle Free Heater Module is activated, the truck's bunk blower fan is powered by the Idle Free battery bank (RF106). The Water Heater Module's coolant pump is running 100% of the time that the Thermostat Mode switch is in the HEAT position.

Dosing Pump

The Idle Free dosing pump (fuel pump) is mounted on the rear wall of the APU.

The electrical connection is made using 2 wires. The dosing pump has 2 speeds. The speed of the dosing pump determines the output of the heater. The temperature requirements for the coolant heater determine the speed of the dosing pump/ heater output.

Fuel Filter & Fuel Circuit

The in-line fuel filter is attached to the input side of the Idle Free dosing pump.

The fuel line feeding the fuel filter begins at the fuel pick-up tube on one of the trucks fuel tanks.

Coolant Circuit

The Idle Free Heater Module is plumbed in series with the trucks bunk heater core coolant circuit. The truck is plumbed so that the water heater's coolant inlet circuit begins at the rear of the truck's engine. The engine's coolant runs through the Idle Free water heater, the bunk's heater core, and returns to the engine block.

Common Issues

The Water Heater Module is trouble Free however issues exist that prevent the heater from starting after a period of non-use.

The fuel filter needs to be checked to make sure that fuel is present. If the tank fuel pick –up tube is not properly located in the fuel tank or if the truck was run out of fuel, the fuel filter may be void of fuel. The fuel filter will need to be primed if the fuel filter does not have fuel present.

The Water Heater Module will shut down if the Water Heater over-heats. Overheating will take place if the coolant circuit has its coolant supply cut off (closed valves).

If the Water heater shuts down 5 times, the heater will not attempt to re-start unless the 12VDC power plug is removed and re- installed into the socket (Heater reset procedure).

Water Heater Module – RF114


Water Heater Module, Explanation

Service

The Water Heater Module requires a fuel filter replacement at the beginning of each winter season, Part #42002.

The water heater exhaust needs to be checked for restrictions and obstructions.

The water heater combustion air intake needs to be checked for restrictions and obstructions.

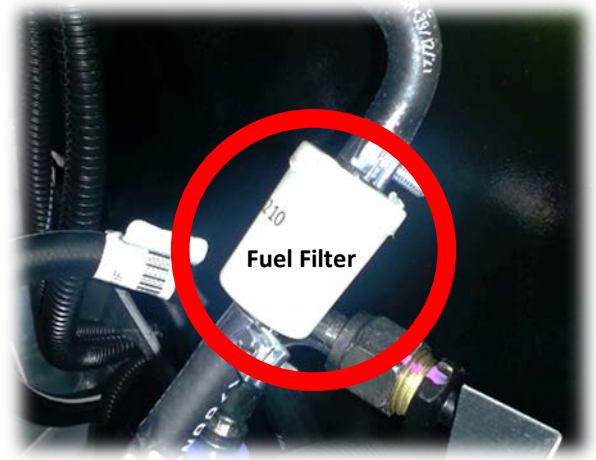

Top of Water Heater

(Oval connector is Power
connector, left)

AGM – RF116

AGM Battery Bank, explained

AGM Batteries

IFS Part # 35001

Component Location

1. APU Exterior, Lower Level or
2. BTF Battery Box

Description & Application

The Idle Free system uses 4 AGM batteries, connected in series.

The Battery Family is Group 31 and each battery contains 105 AMPS (useable).

The 4 AGM batteries are connected together with Red Cables (+) and Black (-).

The Positive battery bank feed is from the front of the battery bank and the Negative battery bank feed is from the opposite end (back or rear).

The battery bank is fuse protected with a 250AMP fuse located above the battery separator (RF101).

The 4 AGM batteries are held in place with a battery hold-down bar.

Overview

The AGM battery bank is dependent on the charge from the truck's alternator whenever the truck's engine is running.

The minimum alternator rating is 160 AMPS DC.

The Idle Free AGM batteries are dependent on the quality of the truck's starter battery condition and connections.

Service is required on the Idle Free AGM batteries. The battery service includes the battery connections in the Truck's starter battery box.

The AGM batteries are charged by the truck's alternator when the truck's engine is running. The Idle Free Battery Separator (RF101) connects the truck's battery bank to the AGM battery bank when the truck's batteries >13.2 VDC.

The AGM batteries are charged when connected to a shore power connection (RF104).

The AGM batteries are charged using the ReeferLink Connection (RF109) if/when the truck is connected to a reefer unit.

Common Issues

Less than 5% of all Idle Free AGM batteries fail to reach the 2 year warranty. The Idle Free system includes Shore Power. Shore Power (when used) keeps the batteries conditioned and extends AGM battery life.

The Idle Free system uses an inverter to power the Idle Free air conditioner. The use of the inverter forces the unit to shut down when the AGM batteries reach 11.0 VDC.

Battery terminals will become corroded if they not treated with battery protection spray.

Service

The AGM Battery bank requires regular Service to maintain connection quality.

The service required is specified on the following pages.

Clean Cables

Tight Cables

Treated Cables



AGM – RF116

AGM Battery Bank, explained

The Idle Free DC Circuit, APU, Exterior, requires service to ensure proper system operation and performance. When the Idle Free APU DC connections are dirty or loose, the Idle Free inverter's GFCI may trip or the Inverter may overload & shutdown.

A poor, dirty or weak DC connection will prevent the Idle Free batteries from charging and will limit the energy available for adequate air conditioner starting.

An overloaded inverter (shown with a red status light, face of the inverter) may be caused by a loose or dirty DC Cable.

A loose DC Connection will reduce the available energy needed to start the air conditioner.

The Idle Free Inverter's GFCI outlet may trip due to dirty connections leaking voltage back to the inverter.

Service

APU, DC Connections

Service Needs:

Clean, tighten, and Protect all DC APU connection points.

Connection Points

1. Battery to battery Cables (6)
2. Bulkhead Connectors (4)
3. Battery Separator (2)
4. Fuse (2)

Truck Battery Box

1. Fuse (2)
2. + Battery Connection
3. – Battery Connection

Tools needed

- 9/16 wrench or socket
- ½ wrench or socket
- Side Cutters

Parts needed

- Tie-straps, 8 inch, narrow
- Battery Protection Connection Spray


Procedure Overview

Remove cover from APU & examine all DC cable connection points, Ensure that all are clean, tight and treated for corrosion protection.

Use a flashlight to check the Battery post connections that are located under the upper level. The positive battery connections are subject to contamination as well as the cable crimps (under the heat shrink), cable ends.

Replace severely corroded battery cable ends or battery to battery cables.

Use battery Protection Corrosion spray on all DC Cable connection points.

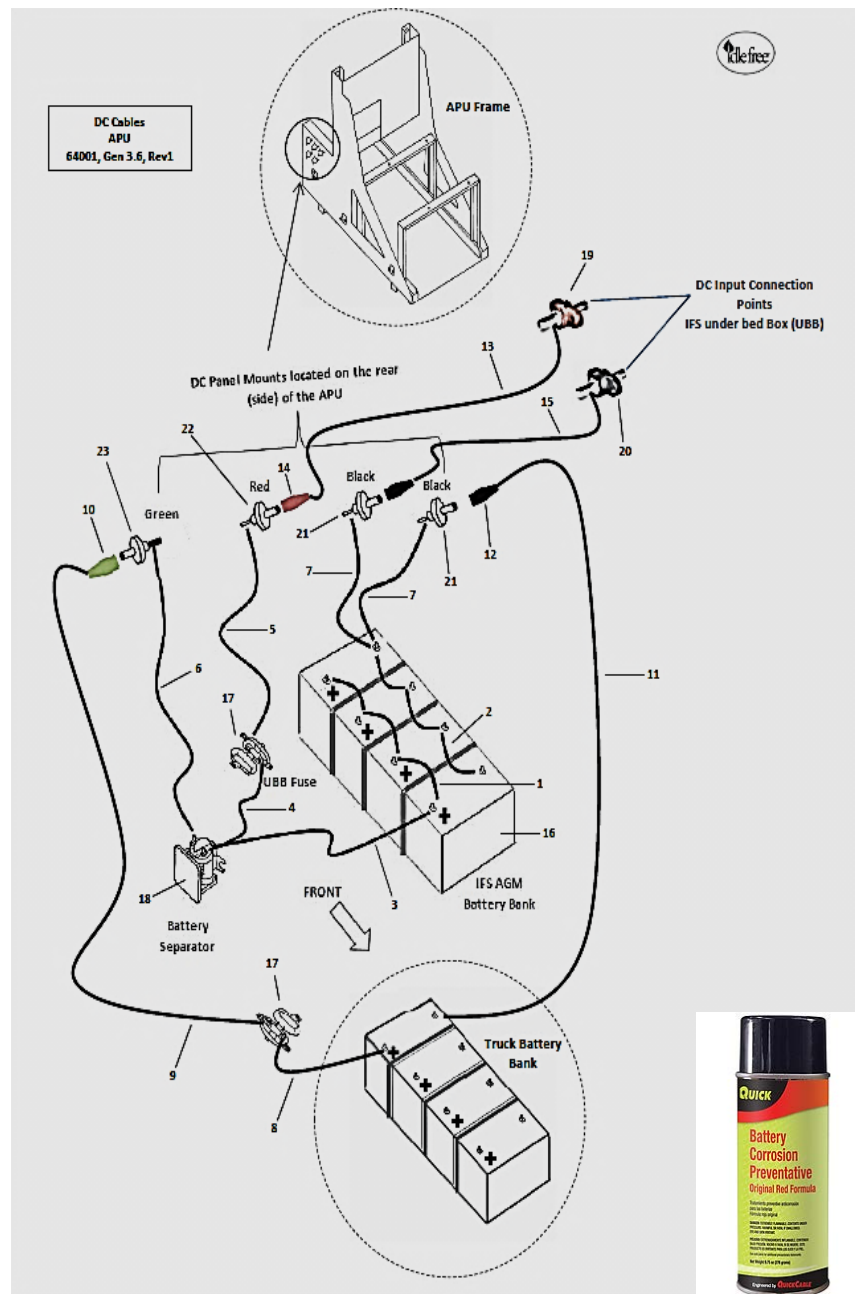

AGM – RF116

AGM Battery Bank, explained

Thermostat must be in the OFF position!

The Idle Free AGM batteries will be in one of two locations; under the air conditioner and water heater or in a between the frame battery box. The Service Procedure for either type is the same.

Battery to battery Cables and Connection Points

1. Inspect all battery to battery cables looking for signs of corrosion or dirt. If corrosion or dirt is present, remove the battery nut and clean the lug and battery terminal. If the battery connection looks clean, check the battery nut to make sure that the battery cable does not move.



Bulkhead Connectors

1. Remove the rear cover of the APU to reveal the DC Bulkhead connectors located on the rear side of the APU. Disconnect all exterior rubber connectors by twisting them counter-clockwise and pulling them out.
2. Inspect the panel mount connection points to ensure cleanliness & no signs of corrosion. Repeat this procedure with the male plug-in connectors.
3. The Black bulkhead connector is ground, the Green is truck battery bank fused power and the red connector feeds the Under-bed module with fused DC power for the Idle Free inverter and other DC needs.
4. Use Dielectric Grease (into the bulk head connectors) prior to re-connecting the color matched male connectors into the bulk head connectors.
5. The bulkhead connectors will only allow the male plug to go in if the proper alignment is achieved. Place a negative twist (counter clockwise) unto the cable connector prior to inserting it to ensure that the connector remains tight. Twist each connector clockwise to lock them in place.



Thermostat must be in the OFF position!

Battery Separator

1. Inspect both terminals on top of the battery separator for cleanliness, tightness, and protection treatment. The far post on top of the battery separator has a single cable and the closest post has 2 battery cables connected to it.
2. Remove the single cable from the far post first; clean the cable end and the battery separator post.
3. Replace cleaned cable end to the far post and tighten securely.
4. Repeat the procedure (3) on the closest battery separator post (2 cables).
5. Treat the cleaned and tightened battery separator posts with Battery Corrosion protection spray.

Fuse

1. Remove the rubber fuse cover and remove the fuse.
2. Clean the fuse ends, fuse receiver terminals, & the cables ends that connect to the fuse.
3. Return the fuse to the fuse holder and tighten to ensure no cable movement.
4. Treat the cleaned and tightened fuse posts with Battery Corrosion protection spray.

DC Cam Lock Connectors – RF117

Current DC Voltage Level of IFS AGM Battery Bank

Cam Lock Connectors

Component Location

APU Exterior, DC Connection Points

Part #s

Red Plug = 33017 Red Socket = 33014

Black Plug = 33018 Black Socket = 33015

Green Plug 33016 Green Socket = 33013



Description & Application

The DC Cam Lock Connectors are connection points between the APU, Truck's battery bank, & the UBB.

Cam Locks are used so the critical DC connections are controlled by Idle Free manufacturing, enabling testing of completed units.

Overview

The DC Cam Locks form a sealed DC connection point between the truck's battery box, the APU, and the UBB.

The Cam lock connectors use a locking cam (male connector) that locks into the female, panel mount receiver.

Three colors are used in the Idle Free system:

1. Red = APU fused power from APU AGM Battery bank to UBB
2. Green = Truck Alternator/starter batteries to APU
3. Black = Ground from Truck battery bank to APU & Ground to UBB from APU.

The Cam Lock Panel mount connectors can be moved from one side of the APU to the opposite side.


Plastic plug inserts can be removed to allow the re-location of the Panel Mount Cam Lock Connectors.

Common Issues

The Cam Locks need to be locked in place to ensure proper energy transfer. The Cam locks need to be inserted and twisted to the right to lock them in place.

Service

The Cam Locks need to be serviced to ensure clean connections, tight connections, and treated connections. Use an anti-oxidant di electric grease to prevent connection deterioration.

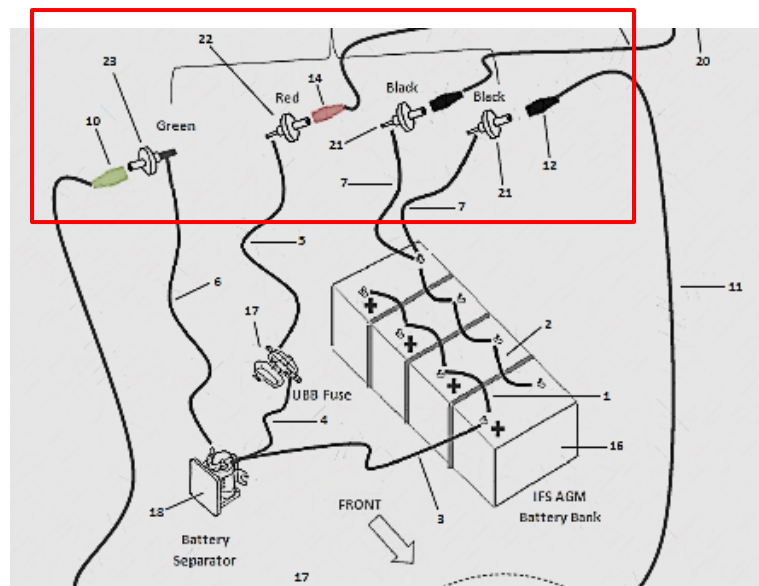

This Page
Intentionally Blank

Refrigerant Quick-Connects – RF118

Description & Application

Refrigerant Quick Connects

Component Location

APU Exterior, behind APU

Part #s

Male #6 = 54207

Female #6 = 54201

Male #8 = 54208

Female #8 = 54202



Description & Application

The Refrigerant Quick Connects enables the air conditioner's evaporator and compressor units to be separated without having to remove the 134A refrigerant from the completed system.

The Refrigerant Quick connects enable the correct amount of refrigerant to be placed into the air conditioning system at the time of manufacture.

Overview

The Refrigerant Quick Connects includes the R134 Refrigerant Service Ports that are located within 12 inches of the rear of the APU.

The Refrigerant connections between the evaporator refrigerant circuits use a male to female threaded valve connection that opens the refrigerant circuit between both components, when the two are threaded together.

The service ports used are standard 134A refrigerant service ports.

The amount of 134A used in each system is one of 2 levels:

- 2.8 pounds
- 2.0 pounds

The exact Freon level is posted on the APU rear wall under the cover.

The rule of thumb is:

- 6 inch accumulator = 2.0 pounds, 134A
- 12 inch accumulator = 2.8 pounds, 134A



Common Issues

The Refrigerant Quick Connects need to be properly connected during the installation process

Refrigerant Oil needs to be added to the connector seals, prior to joining the 2 connectors together.

Partially connecting the 2 Quick Connect parts together results in fittings leaking refrigerant or a high Compressor Head pressure reading.



This Page
Intentionally Blank

RF120 DC Connections, APU Service Procedures

The Idle Free DC Circuit, APU, Exterior, requires service to ensure proper system operation and performance. When the Idle Free APU DC connections are dirty or loose, the Idle Free inverter's GFCI may trip or the Inverter may overload & shutdown.

A poor, dirty or weak DC connection will prevent the Idle Free batteries from charging and will limit the energy available for adequate air conditioner starting.

An overloaded inverter (shown with a red status light, face of the inverter) may be caused by a loose or dirty DC Cable. A loose DC Connection will reduce the available energy needed to start the air conditioner.

The Idle Free Inverter's GFCI outlet may trip due to dirty connections leaking voltage back to the inverter.

Service

APU, DC Connections

Service Needs:

Clean, tighten, and Protect all DC APU connection points.

Connection Points

1. Battery to battery Cables (6)
2. Bulkhead Connectors (4)
3. Battery Separator (2)
4. Fuse (2)

Truck Battery Box

1. Fuse (2)
2. + Battery Connection
3. - Battery Connection

Tools needed

- 9/16 wrench or socket
- ½ wrench or socket
- Side Cutters

Parts needed

- Tie-straps, 8 inch, narrow
- Battery Protection Connection Spray


Procedure Overview

Remove cover from APU & examine all DC cable connection points, Ensure that all are clean, tight and treated for corrosion protection.

Use a flashlight to check the Battery post connections that are located under the upper level. The positive battery connections are subject to contamination as well as the cable crimps (under the heat shrink), cable ends.

Replace severely corroded battery cable ends or battery to battery cables.

Use battery Protection Corrosion spray on all DC Cable connection points.

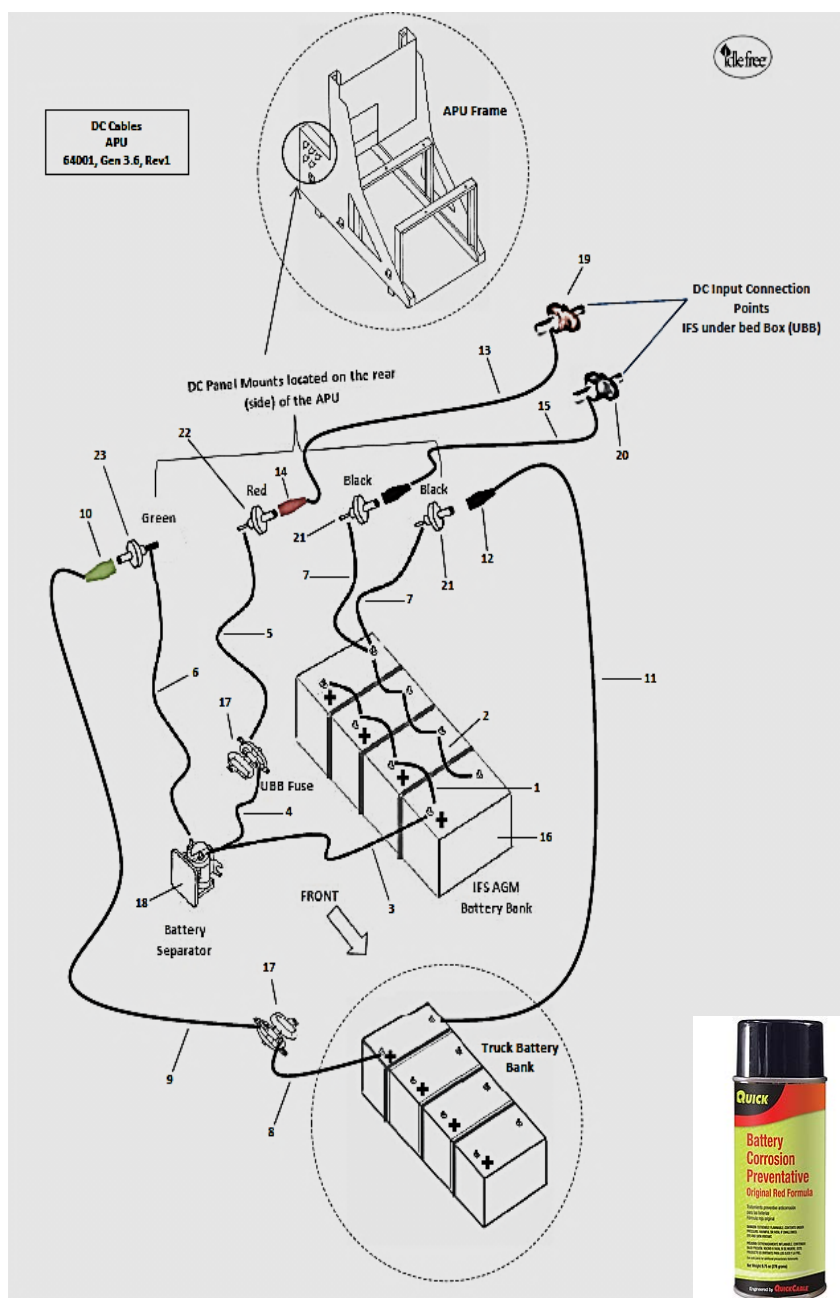

RF120 DC Connections, APU Service Procedures

Thermostat must be in the OFF position!

The Idle Free AGM batteries will be in one of two locations; under the air conditioner and water heater or in a between the frame battery box. The Service Procedure for either type is the same.

Battery to battery Cables and Connection Points

1. Inspect all battery to battery cables looking for signs of corrosion or dirt. If corrosion or dirt is present, remove the battery nut and clean the lug and battery terminal. If the battery connection looks clean, check the battery nut to make sure that the battery cable does not move.



Bulkhead Connectors

1. Remove the rear cover of the APU to reveal the DC Bulkhead connectors located on the rear side of the APU. Disconnect all exterior rubber connectors by twisting them counter-clockwise and pulling them out.
2. Inspect the panel mount connection points to ensure cleanliness & no signs of corrosion. Repeat this procedure with the male plug-in connectors.
3. The Black bulkhead connector is ground, the Green is truck battery bank fused power and the red connector feeds the Under-bed module with fused DC power for the Idle Free inverter and other DC needs.
4. Use battery corrosion protection spray (into the bulk head connectors) prior to re-connecting the color matched male connectors into the bulk head connectors. The bulkhead connectors will only allow the male plug to go in if the proper alignment is achieved. Place a negative twist (counter clockwise) unto the cable connector prior to inserting it to ensure that the connector remains tight. Twist each connector clockwise to lock them in place.



RF120 DC Connections, APU

Service Procedures

Thermostat must be in the OFF position!

Battery Separator

1. Inspect both terminals on top of the battery separator for cleanliness, tightness, and protection treatment. The far post on top of the battery separator has a single cable and the closest post has 2 battery cables connected to it.
2. Remove the single cable from the far post first; clean the cable end and the battery separator post.
3. Replace cleaned cable end to the far post and tighten securely.
4. Repeat the procedure (3) on the closest battery separator post (2 cables).
5. Treat the cleaned and tightened battery separator posts with Battery Corrosion protection spray.

Fuse

1. Remove the rubber fuse cover and remove the fuse.
2. Clean the fuse ends, fuse receiver terminals, & the cables ends that connect to the fuse.
3. Return the fuse to the fuse holder and tighten to ensure no cable movement.
4. Treat the cleaned and tightened fuse posts with Battery Corrosion protection spray.

RF120 DC Connections, APU

Service Procedures

Thermostat must be in the OFF position!

Truck Battery Box Connections

Service Procedures

1. Remove the cover from the truck's battery box to expose the truck's starter batteries.
2. Locate the positive battery post with the Red Idle Free 12" battery cable attached to it (#32041).
3. Remove this Red positive cable from the battery post and clean the battery post and the Idle Free Battery cable lug. Make sure and clean the face of the cable or the mounting face of the battery to ensure good energy transfer.
4. Place the cleaned Red cable back onto the cleaned battery post and tighten the battery nut until the cables attached to it will not move.
5. Locate the other end of the 12" Red cable that is attached to a fuse in a rubber fuse holder.
6. Remove both cable ends (#32042 & #32041) and the fuse in the fuse holder.
7. Clean the fuse connections points, the battery cable lugs, and the fuse itself.
8. Place the cleaned cables back into the fuse holder followed by the fuse.
9. Tighten the fuse holder nuts until the cables will not move.
10. Locate the negative battery post that contains the Idle Free Black negative cable (#32044).
11. Remove this Black negative cable from the battery post and clean the battery post and the Idle Free Battery cable lug. Make sure to clean the face of the cable or the mounting face of the battery to ensure good energy transfer.
12. Place the cleaned Black cable back onto the cleaned battery post and tighten the battery nut until the cables attached to it will not move.
13. Treat the cleaned and tightened Battery posts and fuse holder with Battery Corrosion protection spray.

Drier/Pressure Switch– RF120

Drier & Pressure Switch

Receiver/Drier
IFS Part #53301

Pressure Switch
IFS Part #37015

Component Location
Truck Exterior
APU, Top Level



Pressure Switch

Receiver/Drier



Description & Application

The IFS **Pressure switch** is located on top of the drier.

It is a binary switch that opens its contacts when no zero pressure is present or opens its contacts when high pressure is reached.

The contacts on the pressure switch need to be checked to make sure that they are tight, clean, and protected.

The use of battery protection spray is important on the pressure switch because of the contacts, when contaminated, potentially can leak

Issues (History)

The pressure switch may cause the GFCI to trip if 120VAC current leaks to the drier fitting.

The pressure switch should be replaced if the contacts are tested and continuity is not present when refrigerant is seen in the sight glass below the pressure switch

Service

The contacts on the pressure switch need to be checked to make sure that they are tight, clean, and protected. (RF Sheet 130)

The use of battery protection spray is important on the pressure switch because of the contacts, when contaminated, potentially can leak

Issues (History)

The **Drier** has no history of issues and does not require Service

This Page
Intentionally Blank


Start Capacitor – RF122

Air conditioner, Start Capacitor

Start Capacitor
IFS Part # 34005

Component Location

Truck Exterior
APU
Top Level, left side of compressor

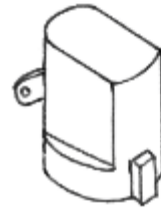

Description & Application

The Start Capacitor is used to assist in starting the compressor during hot or heavy use conditions.

The start capacitor engages when the inverter voltage drops to 100VAC.

The start capacitor raises the compressor start voltage to potentially 170VAC.


Overview

The Start Capacitor uses a circuit board to control mechanical contacts.

The circuit board is attached to the capacitor with female push on terminals.

The circuit board controls a timer that sends the stored capacity, (during compressor start up) over a 2 second period, whenever the inverter voltage drops to <100VAC.

The Start Capacitor has 2 wires exiting the side of the removable black plastic cover. Both of the start capacitor wires connect to the Run Capacitor located above the start capacitor (see figure#2).

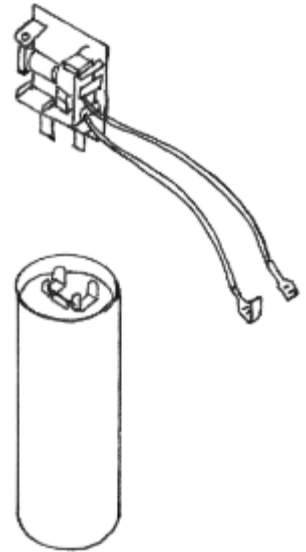

Common Issues

The Start Capacitor's contacts sometimes close and remain closed when they are supposed to be in an open condition. This causes the inverter to overload and shut down.

Turning the inverter OFF & then ON resets the inverter and starts the compressor **only if the Start Capacitor contacts open**.

If the inverter continues to overload and shut down, (after turning it on and then off) the start capacitor may need to be replaced.

The start capacitor can be checked by removing the start capacitor terminals from the run capacitor.


If the compressor starts, the start capacitor is bad and needs to be replaced.

Service

The start capacitor requires minimal service.

The start capacitor connections points must be maintained by keeping the connections clean, tight, and treated to prevent contamination.

Please use RF112 for service procedures

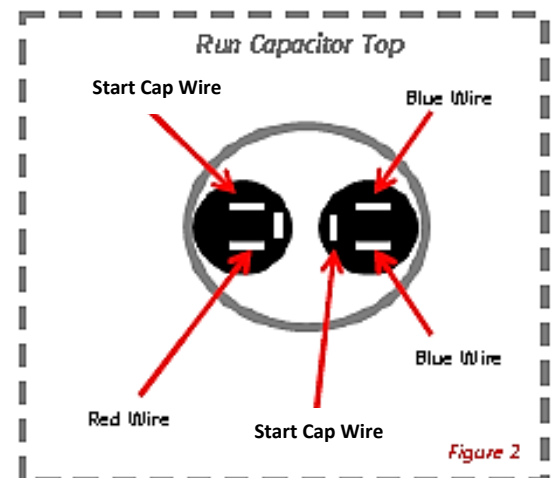

This Page
Intentionally Blank

Battery Test Procedure– RF123

AGM Batteries

AGM Battery Testing

Proper AGM battery testing is required in order to file a warranty claim.

Proper system diagnostics are needed to properly determine that the APU AGM batteries should be removed and tested. Less than 2% of IFS AGM batteries fail in a 2 year period.

The truck's charge system should be checked for problems prior to pulling and testing AGM batteries. (See Reference sheet RF124)

If a truck is driven into a service center and the AGM battery voltage is taken shortly after the truck's arrival, the APU AGM battery voltage should be at least 12.7 VDC.

If a voltage reading is taken that shows less than 12.7 DC volts, the problem is probably the truck's charge system not the AGM battery bank.

The AGM battery bank's present voltage may be a result of an inadequate truck charge circuit, not necessarily a result of a bad battery(s) that need(s) to be replaced.

It is common to have a Dealership diagnose that an AGM battery bank has failed, replace the battery bank, return the AGM batteries to Idle Free, Idle Free analyzes the AGM batteries and determines that the batteries are undercharged, not bad or in a replaceable condition.



Determine why the AGM Batteries are underperforming.

Do Not Remove the AGM batteries without first determining if the problem is the truck's charge circuit.

Tools needed:

- DC AMP Meter
- Voltmeter
- Battery Analyzer

1. Start the truck and take the alternator output voltage at the trucks alternator. *Since the truck probably just drove in, the Voltage output should be 14.0+ VDC.*
2. *If the alternator output voltage is lower than 13.8 VDC, use a DC Clamp AMP meter and determine the DC AMPs running through the alternator's positive cable. Since the truck probably had driven to the service location, the truck's batteries and the AGM batteries shown have already been charged by the alternator. This would mean that the amperage seen at this point should be only the DC components (truck) currently turned ON; blower fan, lights, radio and such.*
3. *The DC Amperage put out by the alternator should be less than 40 amps (all truck accessories OFF) after the truck has been started and after a period of 3 to 5 minutes.*
4. Amperage readings higher than 40 amps (*all truck accessories OFF*) should be researched further to determine if the alternator output amperage is being sent to a bad battery with a bad cell.
5. With the truck's engine still running; remove the APU cover and take the DC voltage on the first battery. Voltage should be the same as the voltage read at the alternator. If the voltage is more than .3 volts lower than the alternator voltage, suspect poor connections; loose cabling, or other factors that are contributing to the voltage difference.

Test the truck batteries (first). History has shown us that poor truck batteries result in poor APU battery charging.

1. Turn the truck's engine off and remove the surface charge from the truck's starter battery bank by running the truck's headlights for at least 10 minutes. *Do not test any batteries that have just been charged by the engine running or a battery charger.*
2. Remove the battery cables from the truck's starter battery bank
3. Use the Midtronics battery analyzer to determine the quality of each battery
4. Replace any battery that lacks the correct capacity
5. Check cable ends for cleanliness prior to putting all back onto the correct battery posts.

Battery Test Procedure— RF123

AGM Batteries

Test the Truck Charging Circuit

1. Remove the cover from the APU
2. Locate the battery separator, *(use the link to the reference guide if needed)*
3. Check the voltage on the single cable connection point on the top of the battery separator
 - a. The voltage reading is the truck's battery voltage and should be the same reading as voltage taken directly on one of the truck's starter batteries
4. If the voltage is different (lower) check the DC connection points between the truck's battery bank and the APU battery separator. The connection points include:
 - i. Green panel mount connector on the side of the APU or battery box
 - ii. Green CamLock connector plugged into the green panel mount connector
 - iii. Fuse holder (Bussman) , located in the truck's battery box
 - iv. Positive cable connector located in the trucks battery box
 - v. Ground cable # 32044, truck's battery box or on the frame behind the truck's batteries
 - vi. Ground cable (black connector), connected to the black panel mount connector, side of the APU
5. If the voltage is the same start the truck and take the voltage reading again on the single cable connection point on the top of the battery separator. The voltage reading should show alternator voltage of greater than 13.0 volts.
6. When or if the voltage reading is above 13.2 VDC, the battery separator should close and the APU batteries will be connected to the truck's batteries.
7. Check the voltage on the double cable connection point (2 cables on this post), on the top of the battery separator.
 - a. The voltage on both battery separator top posts should display the same voltage when the battery separator is closed
 - b. The voltage displayed if both banks are connected will be >12.8 VDC
8. The actual DC Voltage will be based on the charge condition of the AGM battery bank. This will be the case because the truck's battery bank has already been checked.
 - a. If the battery separator DC voltage shows to be near 14 VDC, the battery charge circuit (from the truck) is working properly. The remaining factors that determine if the APU batteries need attention are the cable connections between the APU batteries.
9. Turn off the truck's engine
10. Plug the truck into shore power. The Idle Free battery charger should now be ON.
11. Check the voltage on the double cable connection point (2 cables on this post), on the top of the battery separator.
 - a. The voltage on both battery separator top posts should display the same voltage when the battery separator is closed
 - b. The voltage displayed if both banks are connected should be >12.8 VDC
 - c. If the Idle Free battery charging is working, the voltage should be at least 12.8 VDC
 - d. A voltage reading >13.5VDC means
 - i. Battery charger is working
 - ii. APU AGM Battery bank is nearly full
 - iii. Battery separator should be closed
12. Unplug the battery charger, (Shore Power)
13. If the Purpose of this diagnostic's was to address a run time complaint:
 - a. Turn on the Idle Free air conditioner
 - b. Use the AMP meter and clamp the Red cable between the battery separator and the Bussman fuse located above the battery separator.
 - c. The DC Amperage should be between 35 and 45 Amps DC
 - d. The amperage could be much higher if the air conditioner has been running more than 1 minute without the condenser fan running (APU Cover is off)
14. Turn off the air conditioner as soon as you have taken the amperage reading to prevent compressor damage
15. If the testing so far has resulted in a change in the truck's battery bank or the results of the testing has revealed a good battery charge system from the truck:
 - a. Check the underside of the APU and check to confirm that 5 battery bolts are present that run down the middle of the box, these are used to hold down the batteries, via the battery hold-down bar.
 - b. If any bolts are missing, the batteries need to be removed to ensure that battery movement has not resulted in loose or broken battery to battery cables.

Battery Test Procedure– RF123

AGM Batteries

Test the Truck Charging Circuit

16. If all battery hold-down bolts are present, remove the cables from the 1st battery.
17. Test the battery using the Midtronics battery tester.
18. If the 1st battery shows BAD, remove all batteries and test each one
19. If the first battery shows GOOD:
 - a. Put the battery to battery cables back onto the front APU AGM battery, leaving the cable that runs to the battery separator removed.
 - b. Remove the rear APU Cover
 - c. Connect the ground cable of the Midtronics Battery analyzer to the ground post of the rear battery
 - d. Connect the positive connector lead of the Midtronics Battery analyzer to the positive battery post on the front APU AGM battery
 - e. Test the group of batteries using the CCA function set at 2920 CCA
20. If the test shows good, inspect the connections on the batteries for contamination.
21. Clean the battery connections + the battery separator cable connection points and the fuse connection points.
22. If the battery test shows GOOD BATTERIES CHARGE & RETEST, charge the batteries by plugging into shore power.
23. Continue the charge (shore power) until the amperage going into the battery bank is less than 10 AMPS DC.
24. If the Midtronic's battery analyzer showed that the batteries have low capacity, remove the AGM batteries and test them individually using a CCA rating of 730 CCA.
25. Replace batteries that say REPLACE BATTERY (Midtronics Battery tester)
26. Clean cables before placing them back into service
27. Ensure that all connections are tight
28. Use some type of battery protection spray to protect the new battery connection points.
29. Be sure to connect the positive cable between the battery separator and the first AGM battery prior to putting the APU covers back in place.
30. Be sure to connect the condenser fan harness after the front APU cover is put in place.

This Page
Intentionally Blank

10 reasons that your APU AGM batteries are not fully charged

Please read this before you change any APU AGM batteries

If you have ever gone through the trouble of pulling all of the APU batteries, tested them only to find out that they tested “Good Battery, needs a charge”, now what?

*Check out the charge circuit of the truck **BEFORE YOU PULL THE APU BATTERIES.***

1. Truck battery bank has a bad battery

- a. A failed truck battery will prevent the APU batteries from being charged.
- b. A truck starter battery is subject to fail faster than an APU AGM battery because:
 - i. Truck battery has the job of starting the truck
 - ii. Spends too much time at a voltage level below its minimum voltage level (11.8 VDC).
 - iii. Lead plates in a starter battery are thinner than the lead plates in AGM batteries
 - iv. Lead plates in starter batteries are surrounded by liquid and AGM batteries are surrounded by poly-fiber matting
 - v. The amperage leaving an APU AGM battery is a fraction of the amperage leaving the truck’s starter battery bank during engine start.

2. Truck and/or DC Cables are not connected to the correct connection point.

- a. Trucks that use fusible links suffer when additional batteries are added to the truck because a voltage drop occurs across the fusible link. This voltage drop prevents the additional batteries from being fully charged.

3. DC Cables are the wrong size (gauge).

- a. When alternators are upgraded because additional batteries were added to a truck, the size of the DC cables (Ground and positive) need to be sized to allow current flow between the alternator, the truck’s battery bank and the additional battery bank.

4. DC Cables are too long

- a. The length of the cables used between the truck’s battery bank and the APU battery bank needs to be as short as possible to prevent or eliminate any voltage drops that will prevent the AGM batteries from being fully charged.

5. Battery connection points are contaminated

- a. Battery posts on the truck’s batteries as well as the battery posts on the APU batteries need to be serviced in order to maintain battery connection quality. Battery connections need to be clean, tight, and protected.

Truck Charge Circuit– RF124

10 reasons that your AGM batteries are not fully charged

6. Alternator was replaced with the wrong alternator (too small)

- a. The alternator needs to be >160Amps, bigger is okay, >200 is dangerous.

7. A starter battery was replaced and the cables were left off or placed on the wrong connection point.

- a. When a second battery bank is added to a truck, a battery separator is used to control the connection between the 2 battery banks. If work is done in the truck's battery bank, ensure that all cables are properly connected to the battery posts.

8. APU Battery connections in the trucks battery bank are:

- a. Connected at the wrong connection point
- b. APU ground cable is connected to a truck starter battery that has a fusible link between the alternator ground and the truck starter battery (Volvo or Mack).
- c. APU truck battery connection points are separated onto different battery pairs (Peterbilt uses 2 sets of 2 batteries in the truck's start battery bank. One of these pairs is used to start the truck and the second pair provides non-starter circuit DC power needs.)

9. The APU Battery truck battery connection points are stacked onto insulated, OEM, battery to battery cable lugs.

- a. Kenworth (at times) will use "battery to battery" cables that include plastic coverings that encase the battery lugs. The plastic on these lugs needs to be removed when an APU Battery cable is to be sharing the same battery terminal. Failure to remove this material will aide in preventing the AGM batteries from becoming fully charged.

10. Battery cables are loose

- a. All DC battery connections points need to be tight. A loose battery connection is no battery connection.
- b. Loose battery connections prevent batteries from charging resulting in batteries with no capacity.

Shore Power

1. Locate the Idle Free Voltmeter and count the lights lit. If the truck is not plugged into shore power, 3 or 4 lights will be lit.
2. Use a standard ended extension cord & plug it into the trucks shore power plug (exterior). Go back to the Idle Free voltmeter and confirm that the number of lights now lit is more than the previous check, step 1.
3. Turn the truck's ignition key to ON without starting the truck's engine. Locate the truck's dash voltmeter and confirm that the voltage is above 13.0 VDC. Compare the dash display voltage with the Idle Free voltmeter and confirm that both meters are reading the same (or close) voltages. Turn the truck's ignition Key to the OFF position.

Note; make sure that the truck's engine has been running prior to testing the Idle Free Coolant Heater. The cooling system must be purged of air to allow proper heater operation.

Heat (Option)

4. Locate the Idle Free Thermostat
5. Slide the Fan switch to the ON position. The Idle Free, closet located, evaporator fan should be operating.
6. Slide the switch back to the Auto position.
7. Located the Truck's OEM bunk blower controls. Move the Truck's bunk fan switch to medium speed and confirm that the bunk fan ***is not*** operating.
8. Slide the Idle Free Thermostat's Mode switch to the HEAT position.
 - a. The Truck's bunk blower fans should now operate in all speeds.
 - b. The exterior located coolant heater should be operating

Note to driver; the thermostat does not control the bunk temperature in HEAT Mode. The thermostat only turns on the Idle Free heater. The driver controls the bunk's temperature using the Truck's Bunk controls, heat intensity as well as fan speeds.

Air Conditioning

9. Slide the Idle Free Thermostat's Mode switch to COOL
10. Adjust the Idle Free temperature setting to its lowest point, 68 degrees.

Note; the temperature set point is displayed is in the lower right corner of the thermostat display window. The minimum temperature setting is 68 degrees.

The closet located Idle Free evaporator fan should come on as soon as the set point is below the current room temperature, by at least 2 degrees. The compressor (exterior located), will start, 8 seconds after the evaporator fan (closet) begins to operate.

Ignition Cut-Out Circuit

The Ignition Cut-Out Circuit prevents Idle Free system operation whenever the truck's engine is operating and/or when the truck's ignition Key is in the ON position.

11. Ensure that the Truck's ignition key is in the OFF position.
12. Locate the Idle Free Thermostat and slide the Fan switch to the ON position. The fan should instantly begin to operate.
13. Go to the trucks Ignition Key and turn the Key to ON without starting the truck's engine. The Idle Free evaporator fan should cease operation.
14. Turn the truck's ignition Key to the ACCESSORY position. The Idle Free evaporator fan should begin operation. The Evaporator Fan should run with the key in the OFF position as well as the ACCESSORY position.

The ReeferLink connection needs to be used (connected) before the Idle Free system is turned on. This ensures that the Idle Free batteries remained charged during system operation.

The Reefer Unit must have an alternator rating of 65 AMPS or greater.

- **DO NOT** run the APU batteries down and then connect to the reefer unit. This will not harm the reefer but may result in the Idle Free batteries not being charged, short run time.
 - **DO NOT** have the reefer link connector connected while you are driving unless you have a failed alternator on the truck or trailer. Connecting, if both alternators are working, will not allow you to know if one of the alternators has failed because the opposite alternator will run both 12VDC systems.
- A. The Idle Free Reefer Link system is a controlled DC connection between the truck and the reefer unit.
 - B. The ReeferLink connection provides battery charging for the Idle Free APU.
 - C. The Reefer Link connection allows the truck or the reefer unit to supply power to each other.
 - D. In the event that a truck alternator or a reefer alternator fail, the ReeferLink connection is used to literally connect the 12VDC connections (truck and reefer trailer) together.

Using the Idle Free ReeferLink Connection:

1. Make sure that the Reefer Unit is turned ON, AUTO Start or Continuous Run.
2. Remove the Idle Free Interconnect Cable set from the Driver's side Box
3. Connect the Interconnect Cable to the Truck side of the ReeferLink Connector.
4. Connect the Interconnect Cable to the Trailer side of the ReeferLink Connector.
5. Turn On the Idle Free APU (Air conditioner or Heat)

The ReeferLink System Operation Guide

Confirmation that the ReeferLink connection is working

(Reefer Unit Is Running)

- Reefer Alternator should display >13.1 VDC
- Idle Free Voltmeter should show 4 lights (or more)

(Reefer is not running)

- Reefer Battery Voltage should display between 12.1 VDC & 12.6 VDC
- Reefer unit should automatically start when DC Volts drop to 12.1 or 12.0

When to use the Reefer Link Connection:

- 1. When the Bunk requires air conditioning or heat**
- 2. When/If the reefer alternator fails**
- 3. When/If the truck alternator fails**

Reefer Alternator failure

- 1. Connect the interconnect cable set to the truck and trailer and route the set with the air lines or electrical trailer harness from the truck to the trailer.**
- 2. Keep both connectors in place, as you drive, until the reefer's alternator can be replaced.**
- 3. Secure the ReeferLink Cable set to ensure that it does not rub on the step deck.**
- 4. Make sure that the replacement alternator is at least 65 AMPS.**

Truck Alternator failure

- 1. Connect the interconnect cables and route them with the air lines or electrical trailer harness.**
- 2. Keep the connector in place as you drive, until the truck's alternator can be replaced.**
- 3. Secure the ReeferLink Cable set to ensure that it does not rub on the step deck.**
- 4. Make sure that the replacement alternator is at least 160 AMPS.**

8 second + 5 minute Delay Circuit – RF128

Description & Application

8 second + 5 minute Compressor Delay Circuit

Component Location

UBB, Top Shelf, Back Wall

Part # 37022

8 second + 5 minute delay circuit is
factory installed starting 12/05/2014
IFS Serial Numbers >36U14120512

The relay delay timer (37022) will delay the compressor activation 8 seconds & will include a 5 minute delay circuit that will prevent the compressor from starting for 5 minutes, anytime power is cut to the compressor circuit.

Delay Timer relay (37022) eliminates compressor hard starts caused by the truck's ignition being turned on for less than 5 minutes.

Delay Timer relay #37022 uses 3 terminals instead of 2 terminals used on Delay Timer relay #37020 (previous delay method used prior to this one).

Delay Timer relay #37022 is wired:

1. To the Compressor Relay +, yellow, 18 gauge wire
2. From the Thermostat +, yellow, 18 gauge wire
3. To the Heat Relay ground connection point, black, 18 gauge wire

Diagnostics

Question: Has the truck's Ignition Key been moved to the ON position in the last 5 minutes?


The Delay Timer relay (#37022) only affects the compressor circuit. ***If the thermostat is in COOL & AUTO modes, the fact that the evaporator fan is running will confirm that the delay timer is in its 5 minute shut down period.***

Confirm that the driver is shutting down the air conditioner with the ignition key instead of the thermostat.

Remind the system operator to always shut down the air conditioner with the thermostat!

Remember that the inverter will show a solid Red Light if the compressor did not start.

37022 Delay Timer, UBB, 5 min

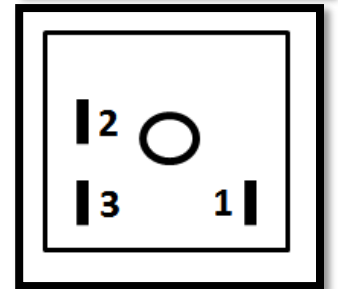

This Page
Intentionally Blank

Compressor, A/C – RF129

A/C Compressor, Tecumseh

Compressor

IFS Part #34001

Component Location


Truck Exterior
APU, Top Level

Description & Application

The IFS A/C Compressor operates using 120VAC power from the IFS inverter (RF105).

The IFS A/C Compressor uses 134A Refrigerant.

The IFS A/C Compressor has a Thermo overload switch located on the compressor top, under the plastic cover.

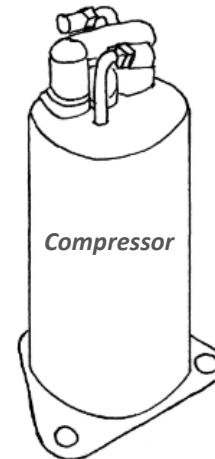

Issues (History)

Compressor was changed in early 2012 from a Panasonic to this Tecumseh. Both models have the same displacement however about 100 incorrect displacement compressors were mistakenly put into service, resulting in a TSB (Technical Service Bulletin, #1205211B) that required a compressor change.

Changing to the Tecumseh Compressor required a new start Capacitor, Sup SPP7E, IFS Part #34005.

The original Supco Start Capacitor (SPP7E) was manufactured (and installed into the IFS system) with loose, push on terminal ends that connected the capacitor's circuit board to the capacitor body (lower unit). The loose start capacitor connections resulted in a Capacitor TSB, IFS#1209181B.

The Capacitor TSB was the field fix and the Permanent fix was to solder the start capacitor terminals to the capacitor body. This change over was put in place in mid-2012

Compressor Bracket (Side mount)

The compressor side mount bracket is subject to failure by breaking at the joint where the side bracket attached to the compressor bracket. Removing the bracket all together is one method of repair that has stood the test of time. The part number for the replacement side bracket kit is IFS#31021

Compressor Top Tube

The compressor Top Tube is subject to breakage when the output (refrigerant hose) is tied tight between the compressor top and the condenser coil connection point.

The prevention for this issue is to ensure that the refrigerant hose between the compressor and the condenser coil is not tied down and allows for freedom for play between the compressor and the condenser coil.

Service



The Compressor does require a small amount of service just to make sure that the connector terminal ends are tight (secure) on the connection points under the plastic cover, compressor top.

Compressor Top Wiring

R = BLUE (from run capacitor)

S = RED (from run capacitor)

C = BLACK (from pressure switch)

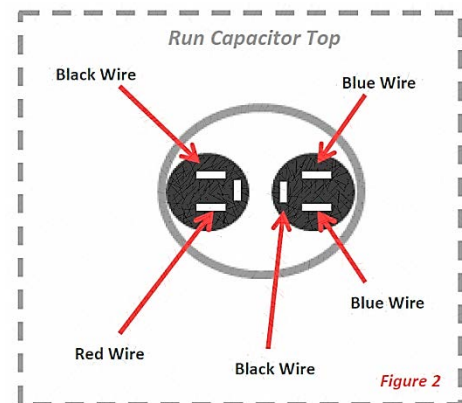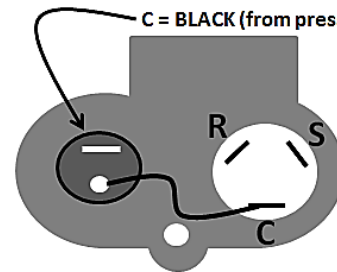



Compressor, A/C – RF129

A/C Compressor, Tecumseh

Compressor Troubleshooting

The Compressor requires the following (operate):

1. Inverter ON (or Stand-By Mode)
2. UBB Power Plug into the Inverter Outlet
3. GFCI Outlet, not tripped
4. Ignition Key in OFF or accessory position
5. 12VDC Power leaving the Ignition Relay (RF107, RF106)
6. Thermostat on COOL (not in 5 minute shut down MODE)(RF103)
7. 12VDC Coil power at Compressor Relay (RF106)
8. 120VAC power leaving the Compressor Relay (RF106)
9. 120VAC power at the Compressor connection, rear of the UBB (RF110)
10. 120VAC power on the Pressure switch, both terminals (APU, Receiver/Drier Top).
11. 120VAC Power on the compressor top, thermo-overload switch (RF120).
12. Run Capacitor must have 5 wires connected to it. (RF122)
13. Start Capacitor must have its 2 wires connected to the Run Capacitor.(RF122)

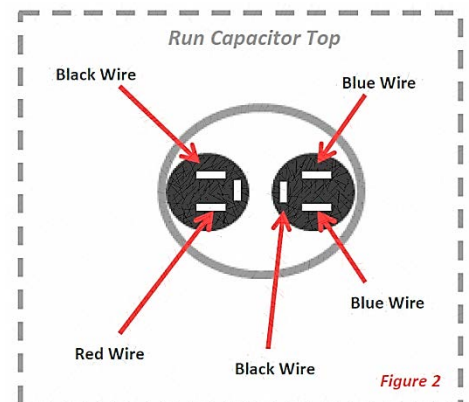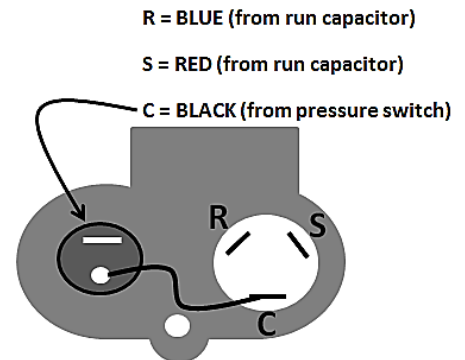

RF130, 120VAC Connection Service

The Idle Free air conditioning 120 Volt Harness requires service to ensure proper system operation and performance.

When the Idle Free APU connections are dirty or loose, the Idle Free inverter's GFCI may trip or the Inverter may overload & shutdown.

An overloaded inverter (shown with a red status light, face of the inverter) may be caused by the start capacitor not engaging (needed to start the compressor) because the start capacitor connectors are dirty or loose.

The Idle Free Inverter's GFCI outlet may trip due to dirty connections leaking voltage back to the inverter.

Service

APU, 120 Volt Air Conditioner Harness Connections

Service Needs:

Clean, tighten, and Protect all 120 volt APU connection terminals.

Connection Terminals – (13 total)

1. Harness input, (White to Blue, Neutral)
2. Harness Input Pressure Switch (drier), 2 connections (Black, Hot)
3. Run Capacitor, 5 connections
4. Compressor Top, 4 connections

Tools needed

- Needle Nosed Pliers
- Side Cutters




Parts needed

- Tie-straps, 8 inch, narrow

Procedure Overview


1. The Ties straps currently securing the 120 volt, APU air conditioning harness need to be removed to allow all connections to be serviced.
2. All connections need to be removed, cleaned and tightened so as to ensure a tight fit onto the appropriate connection point
3. All connections (cleaned & properly tightened) need to be treated with an appropriate preventative terminal protection spray.

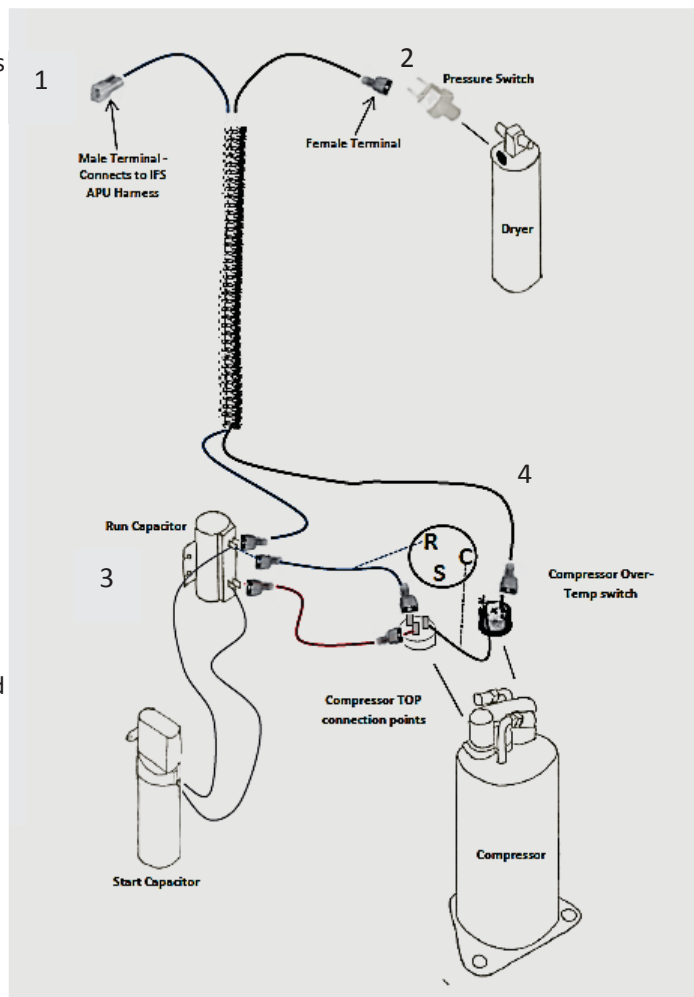

Thermostat must be in the OFF position!

Pressure Switch Connections (2, female push-on, black wire)

1. Remove pressure switch (drier) connectors
2. Clean pressure switch terminals
3. Tighten crimped female push-on terminals using a needle nosed pliers, tighten to near closed.
4. Return crimped and tightened terminals to the pressure switch terminals
5. Spray pressure switch connection points with the battery terminal protection spray.

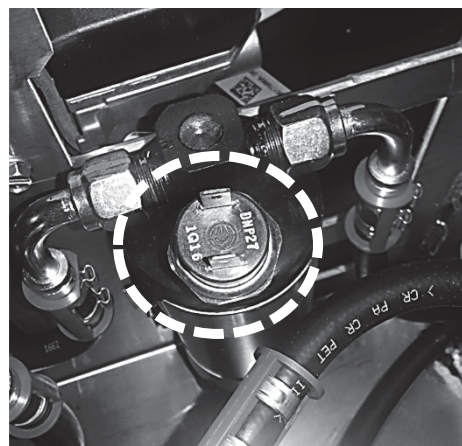


Pressure switch should look like this after the terminals are removed, cleaned, tightened, replaced and treated with battery terminal protection spray.



Thermostat must be in the OFF position!

Harness input, (White to Blue, Neutral)

1. Locate Neutral wire on IFS 120 volt air conditioning harness. The neutral wires are connected in line above the drier, white wire connected to a blue wire, male pushed into a female.
2. Clean both connectors (terminals)
3. Tighten female terminal using a needle nosed pliers, tighten to near closed.
4. Connect crimped and tightened terminals together
5. Spray pressure switch connection points with the battery terminal protection spray.

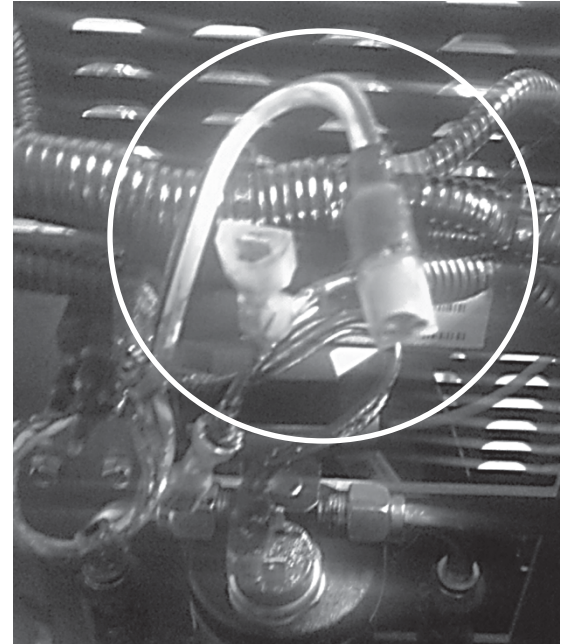



Thermostat must be in the OFF position!

Run Capacitor, 5 connections


1. Remove all 5 connectors from the run capacitor.
2. Clean all terminals
3. Tighten the 2 Blue wires, female terminals, using a needle nosed pliers, tighten to near closed.
4. Push both female, blue terminals back onto the (aluminum frame side) run capacitor, top and bottom posts.
5. Locate one of the black, 18 gauge wires from the start capacitor (mounted below the run capacitor).
6. Tighten the female connector end using the needle nosed pliers. **(This step is critical and has been found to be a recurring problem, lose start capacitor connections!)**
7. Push on the female start capacitor terminal to the open post on the same side along with the 2 blue wires.
8. Place a Tie Strap around these 3 connections and tighten.
9. Locate the removed red wire and the remaining black wire (start capacitor)
10. Tighten both terminal ends using the needle nosed pliers, red and black wires.
11. Install the tightened red and black capacitor wires onto the open side of the start capacitor. Place the Red wire onto the lower post and the black wire onto the upper post. The side post will not receive a terminal.
12. Place a Tie Strap around the red and black wire and tighten.
13. Spray the run capacitor connection points with the battery terminal protection spray.



Tie strap in place on first set of run capacitor terminals, contains 2 blue wires and a back wire from the start capacitor.

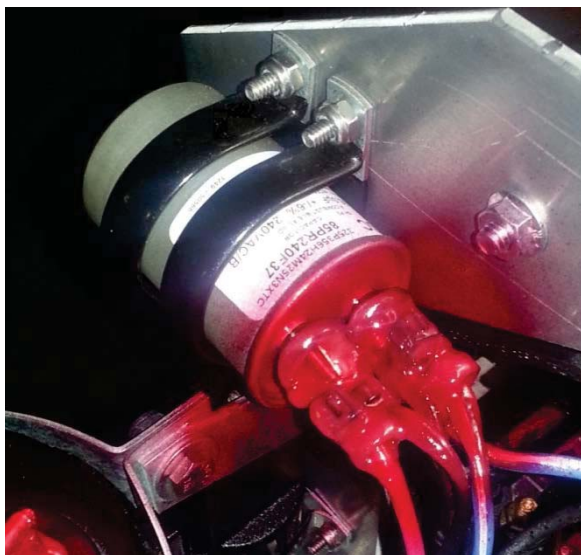
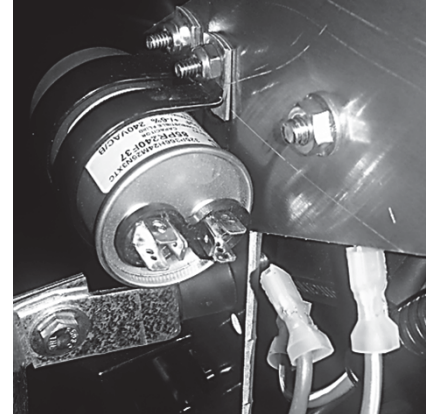


Run Capacitor with all terminals in place. 2 Ties straps are used; each set of terminals is tied separately.

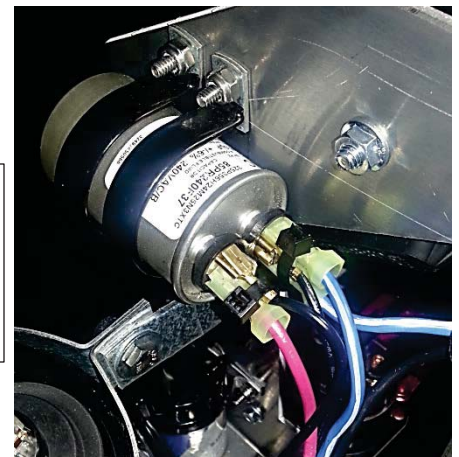

Compressor Top, 4 connections

1. Remove the screwed on cover from the compressor top.
2. Check the tightness and cleanliness of the connections.
3. If the 4 connectors are clean and tight, do not remove them from their connection point.
4. If any one of the connections is loose, remove it and use the needle nosed pliers to tighten the connector, place the tightened connector(s) back on to the appropriate terminal post.
 - a. Black = C
 - b. Red = S
 - c. Blue = R
5. Spray all compressor terminals with battery corrosion spray.
6. Install cover, do not over tighten. If the cover is cracked, replace the cover.
7. Secure all loose wires with tie straps.
8. End of procedure

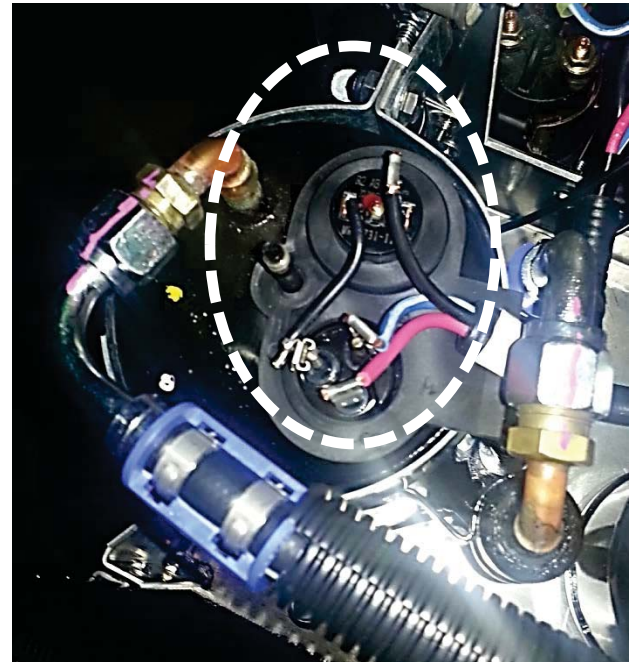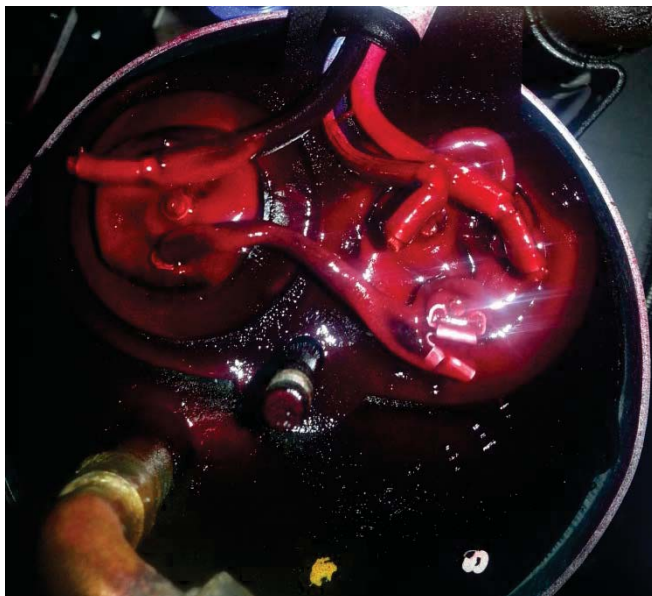

This Page intentionally blank

